


# NURSERY SWING

## USER AND ASSEMBLY MANUAL

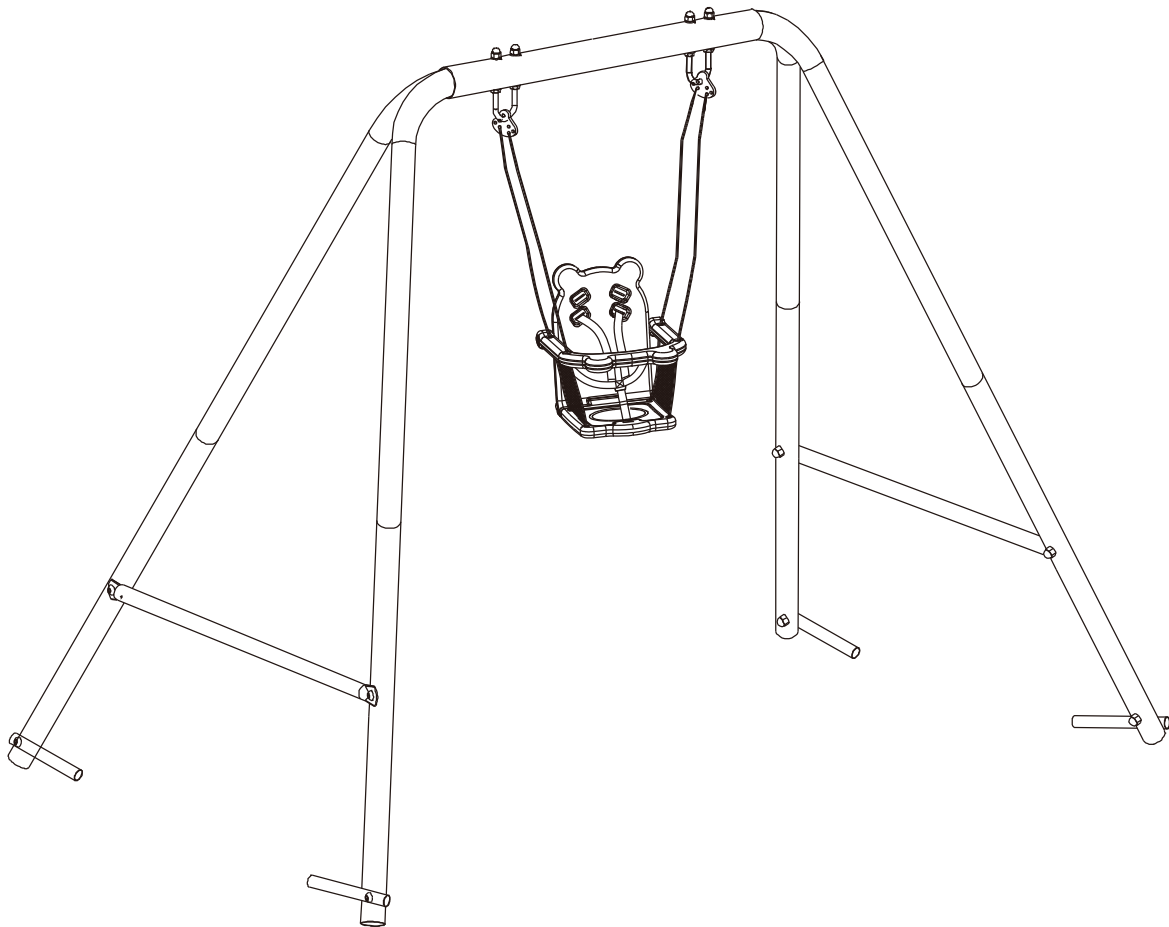

Tips : It will take 2 people around 30 mins to assemble this product.




### WARNINGS!



- Misuse and abuse of this product can result in injury.
- Read instructions before assembly or using this product. Retain Instructions.
- Always inspect product before use, checking for worn, defective or missing parts.
- Suitable for age 9-36 months. Max user weight 25 kg.
- Not to be used by children over 36 months due to strength.
- Assembly by adults.
- Adult supervision at all times.
- Only for outdoor and domestic use.
- Before you start assembly please check all parts are included, if any parts are missing or you need advice, please call Customer Help Line: (+44) 0330 0904 420.

NS-004

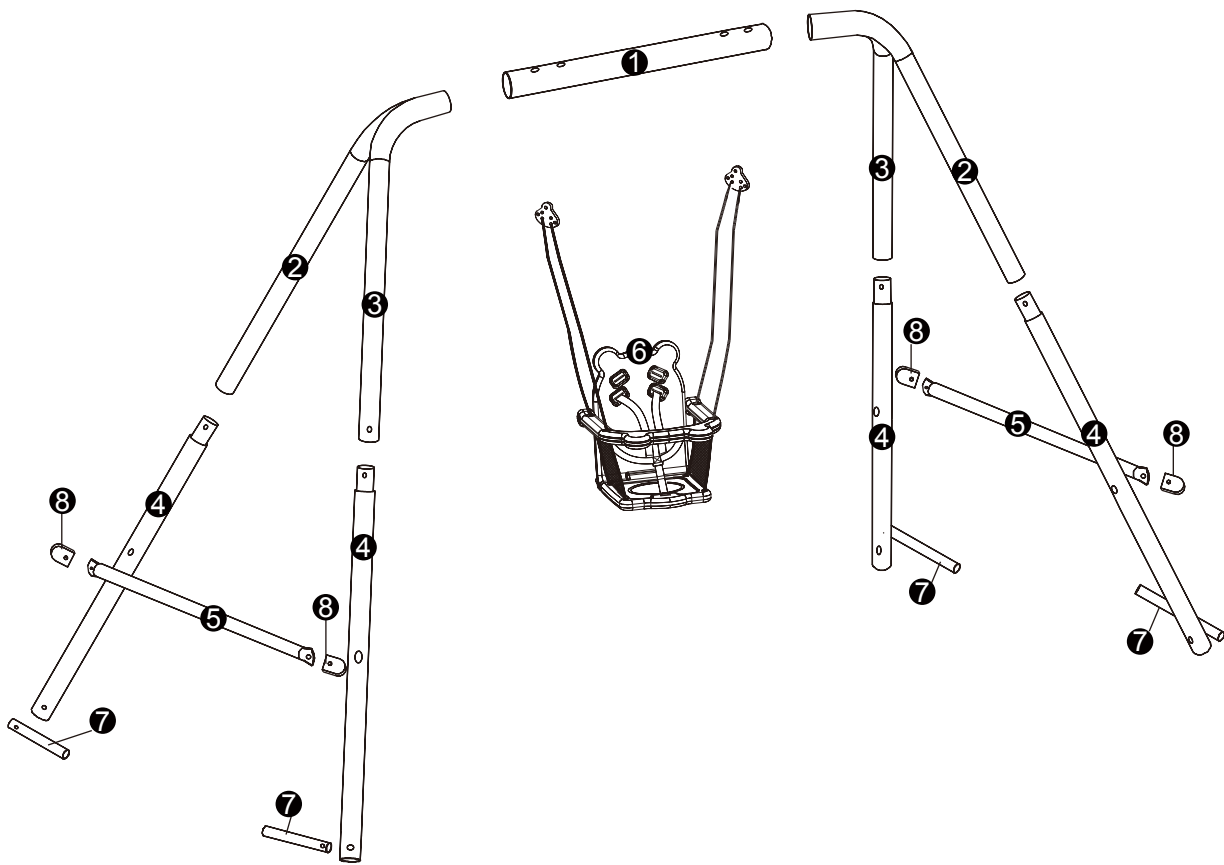


NO.	PART LIST	QTY	
(1)	TOP BAR	1	SW-TOPBAR
(2)	LEFT TOP LEG	2	NS-TPLEG-LHS
(3)	RIGHT TOP LEG	2	NS-TPLEG-RHS
(4)	LOWER LEG	4	SW-LOWLEG
(5)	CROSS BAR	2	SW-XBAR
(6)	SWING	1	NS-SEAT
(7)	PEG	4	Peg Tube
(8)	CAP	4	NS-CAP

**contents**


GEN-UBOLTM8X102

**A** x2 (M8x102mm)

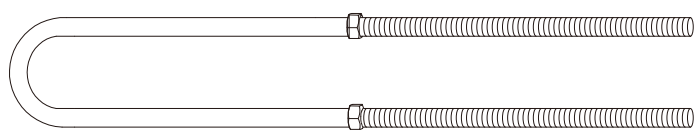


GEN-BOLTM6X36

 **B** x4 (M6x36mm)




GEN-BOLTM6X53

 **C** x4 (M6x53mm)



GEN-BOLTM6X42

 **D** x4 (M6x42mm)



GEN-ARCWASH-19X8.5

**E** x8 (19mm)



GEN-ARCWASH-14X6.5

**F** x24 (14)



GEN-SPRWASH-M8

**H** x4 (13.5)



GEN-SPRWASH-10.5X1.5

**I** x12 (10)



GEN-CAPNUT-M8

**J** x4 (M8)



 
GEN-NUT-M6

**K** x12 (M6)




FNS-SEATPINS

**M** x2 (φ8x100mm)



GEN-SPAN5-11-13

**W** x1 (130mm)

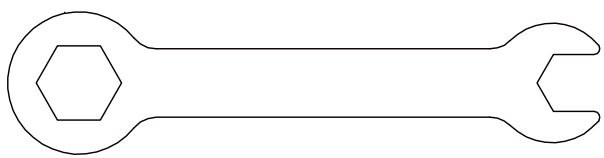

GEN-ALWR6MM



**Z** x1 (65mm)




assembly





step 1

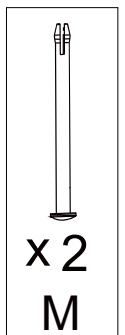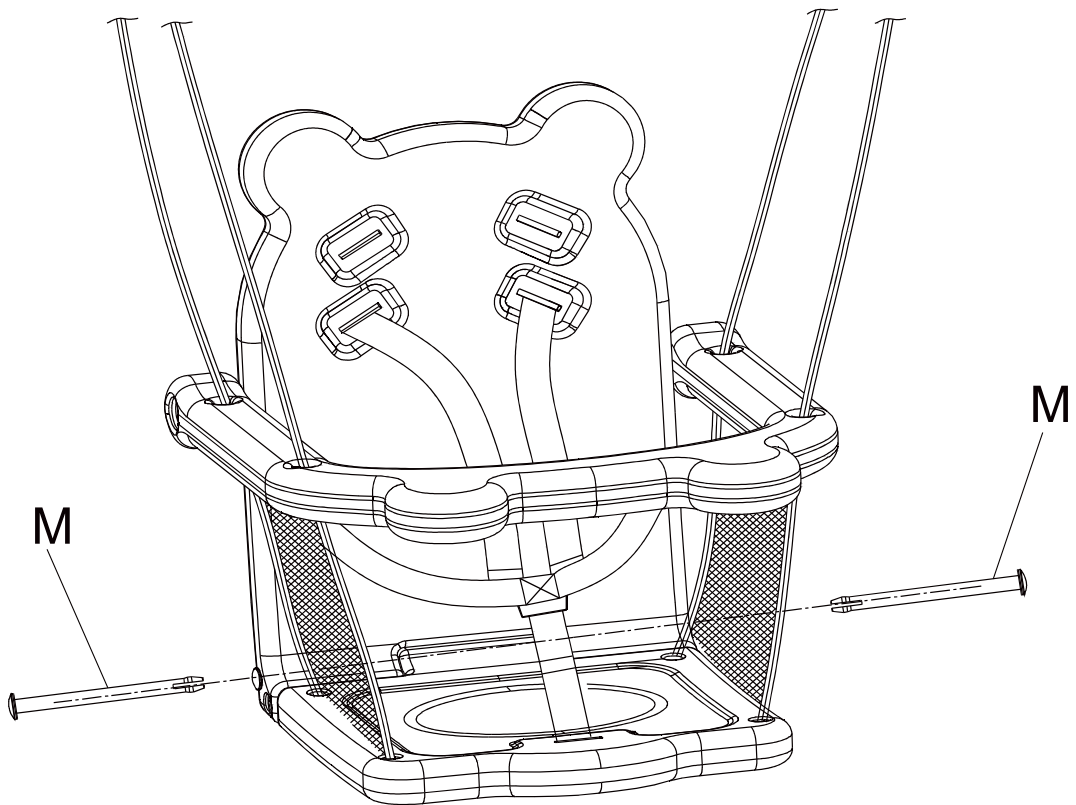Insert the buckle(M) to lock the swing.

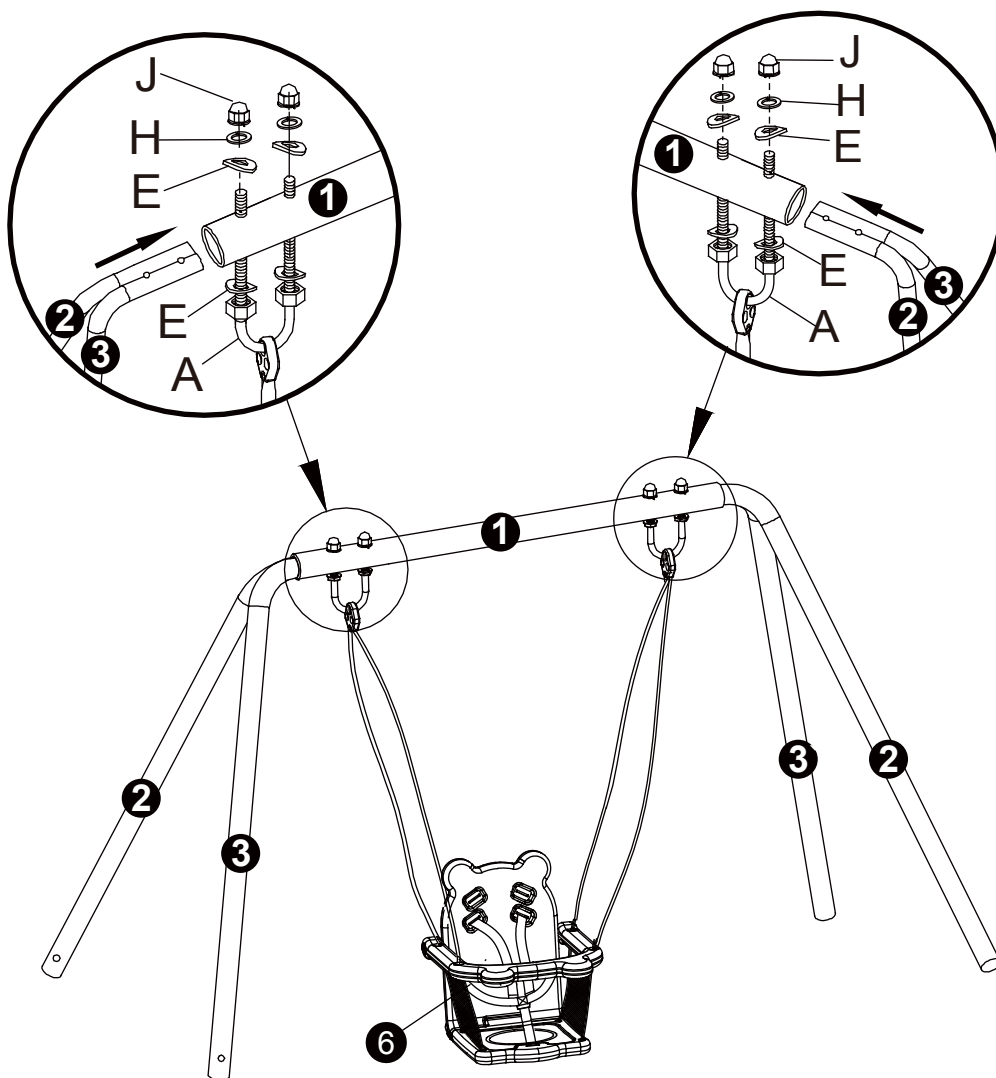


 
step 2







			
x2	x8	x4	x4
A	E	H	J


assembly

 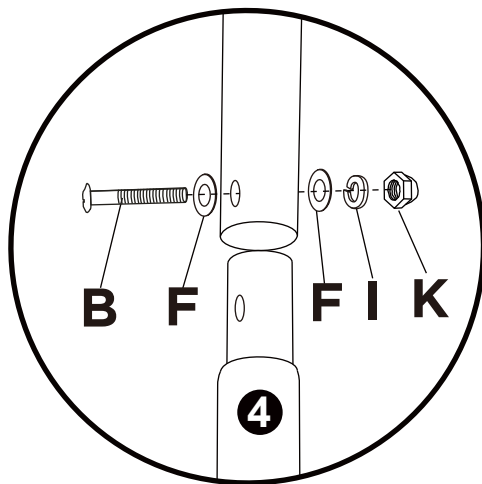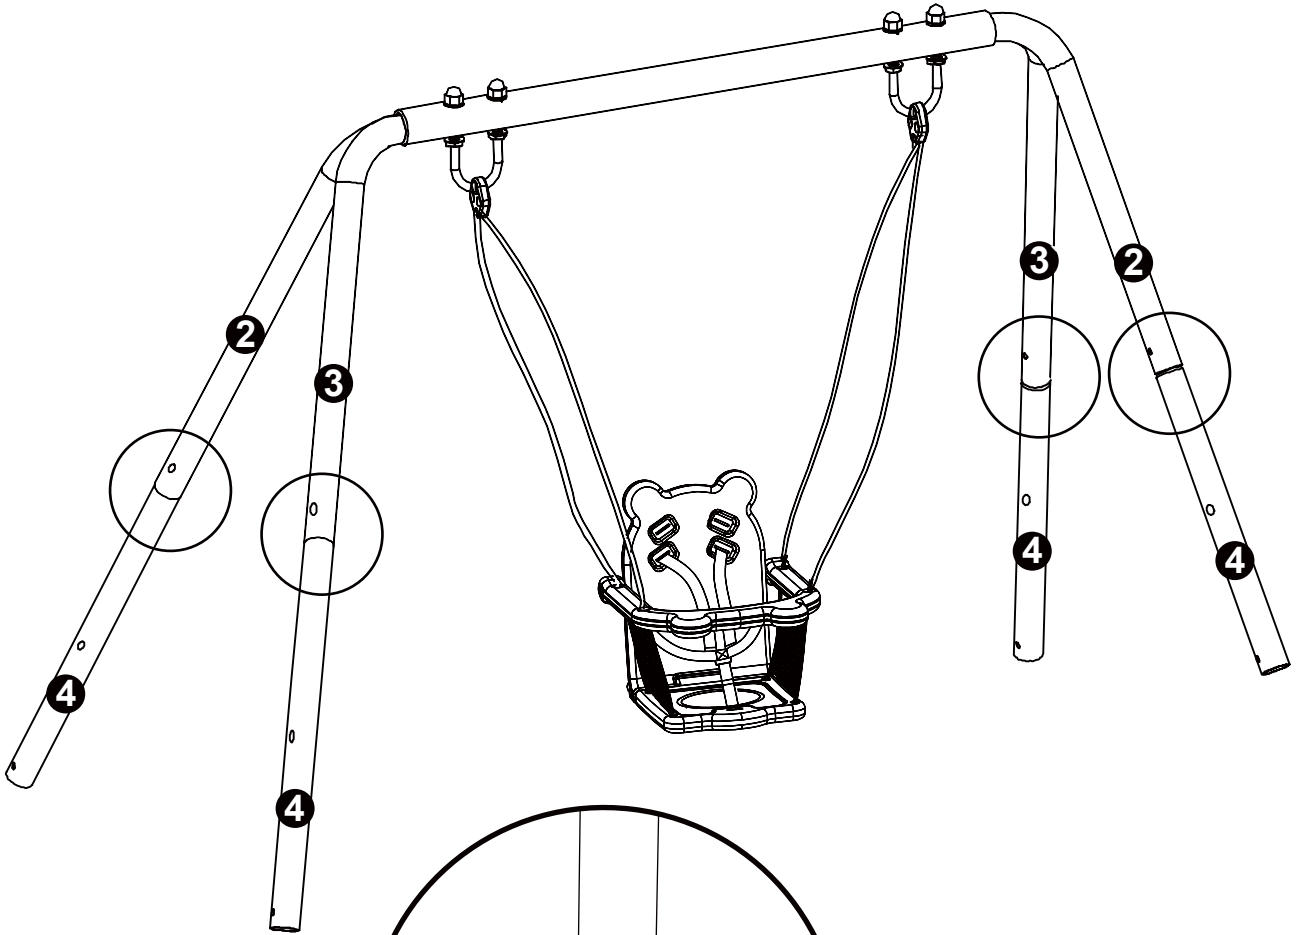step 3







			
x4	x8	x4	x4
B	F	I	K

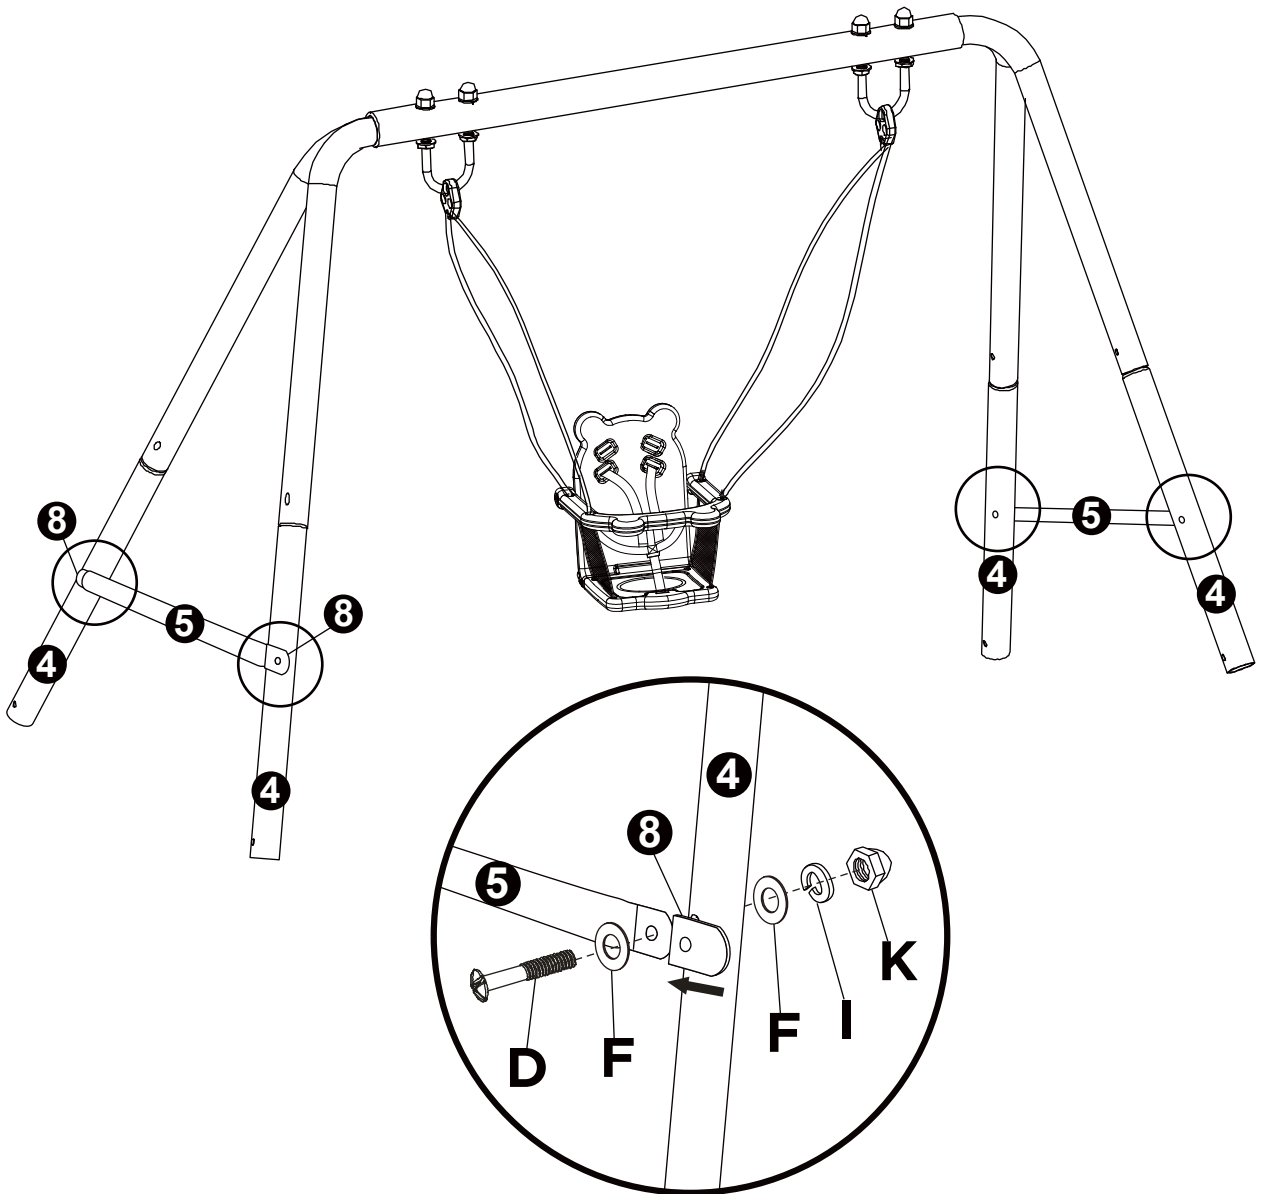 step 4









1# PLEASE ATTACH THE PLASTIC CAP (8) INTO CROSS BAR (5) FIRST.

2# THE CROSS BAR (5) NEEDS TO BE ATTACHED TO THE OUTSIDE OF THE SWING FRAME.

			
X4	X8	X4	X4
D	F	I	K

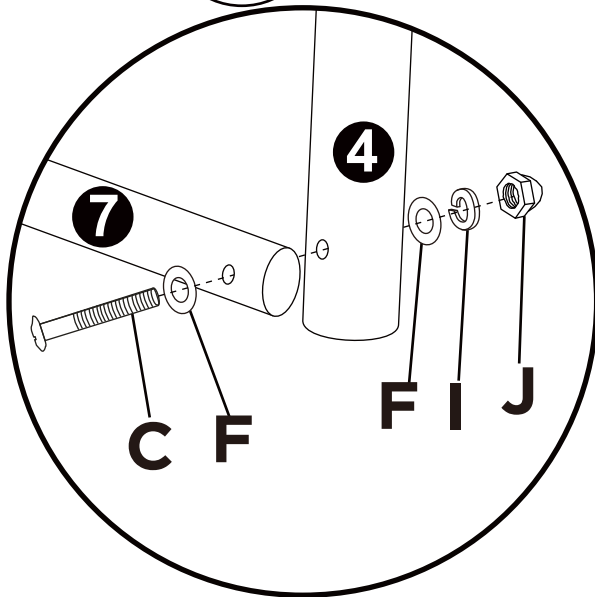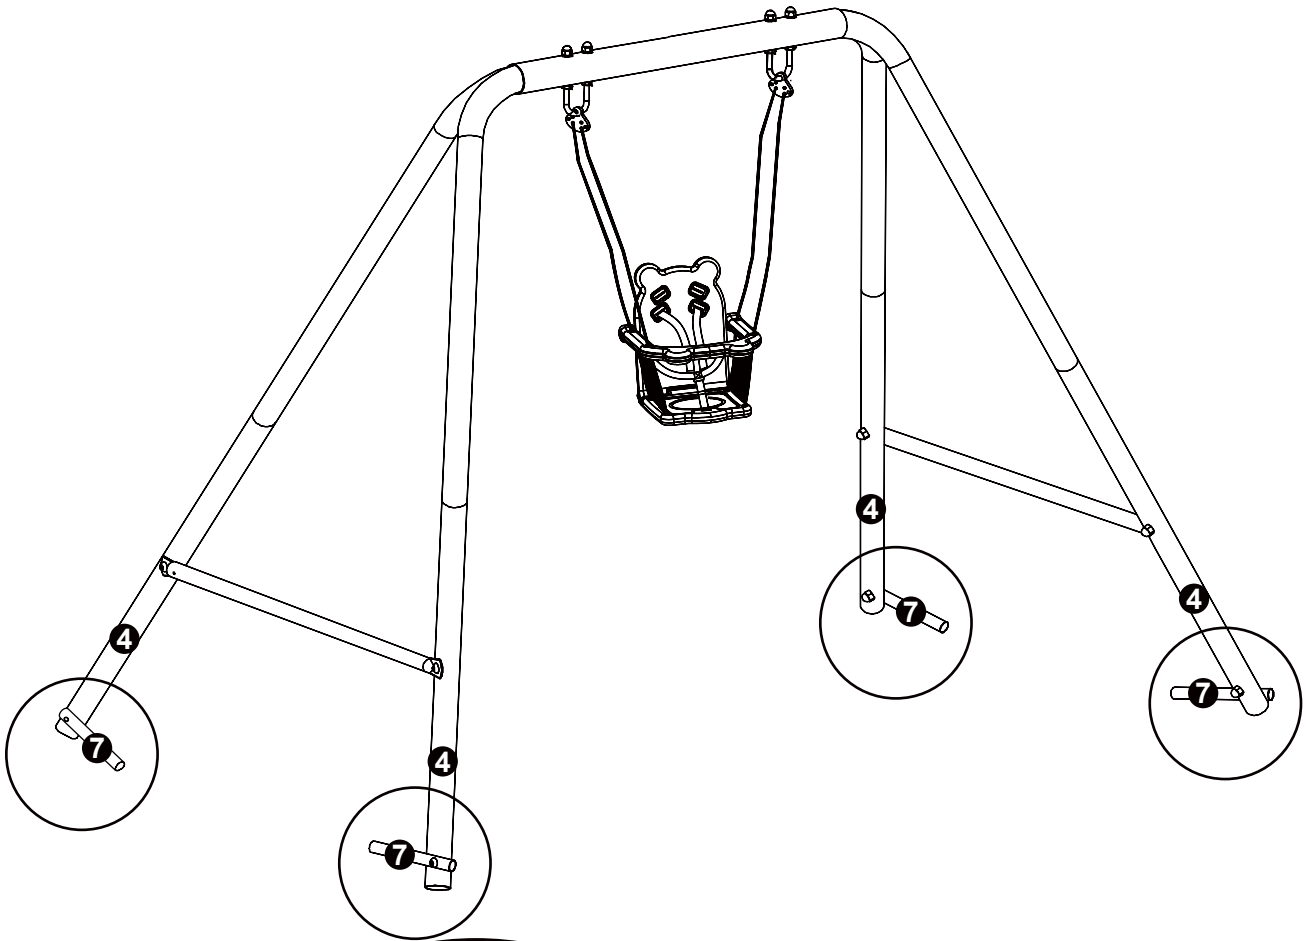 
step 5



			
x4	x8	x4	x4
C	F	I	J




step 6

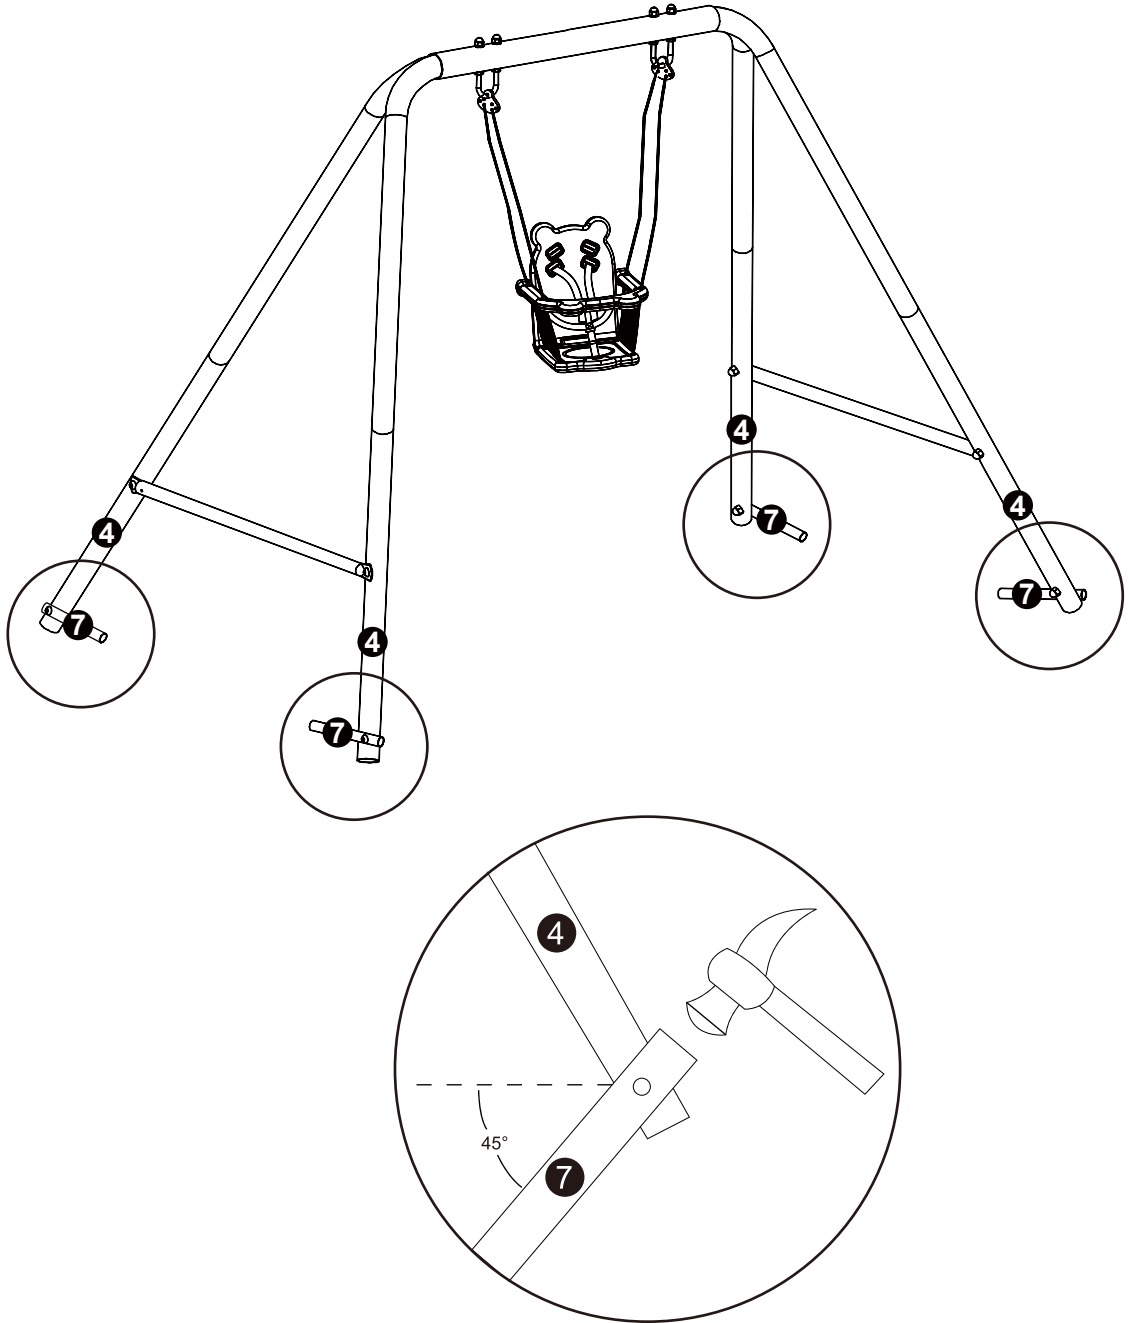

assembly

step 7

NOTE: LOCK THE SEAT BELT TIGHTLY OVER THE CHILD.

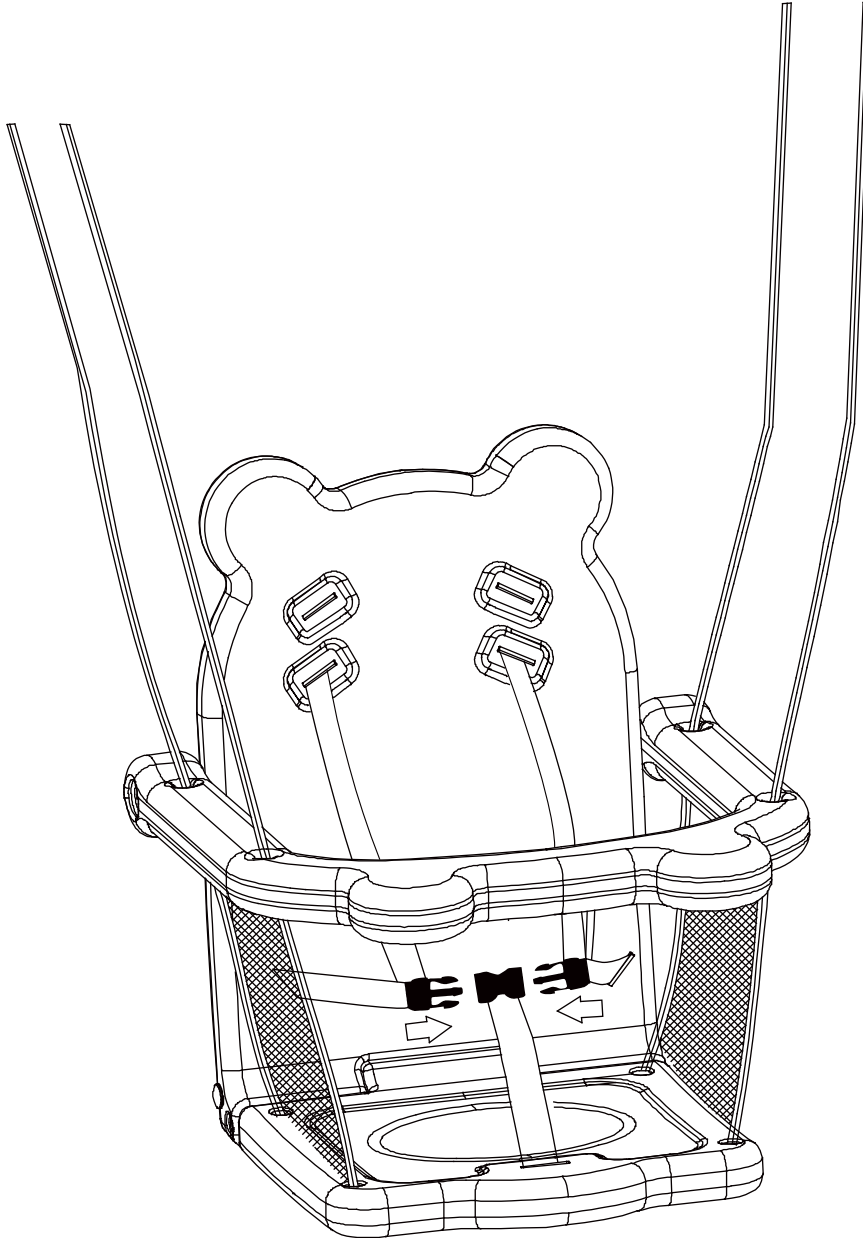



## Warning

Observing the following statements and warnings reduces the likelihood of serious injury.

It is designed for children aged 9-36 months with maximum weight of 25kg.

- Provide on-site adult supervision for children of all ages at all times. Never leave children unattended.
- It is recommended that the playground equipment be located on level ground by anchors. Be certain that all anchoring devices (including concrete) are placed below the level of the playing surface and covered with protective soft material, or below ground level to prevent tripping.
- Only one child per seat at any one time.
- Teach children to sit in the centre of the swing seat, with their full weight in the centre of the seats. DO NOT allow children to lean to the side when on swing seats or to collide with other playmates. DO NOT allow children to stand on the swing seat.
- Dress children appropriately while on and around this equipment. DO NOT allow children to wear ponchos, scarves, jewelry, loose shoes, jackets or clothing with loose strings and/or clothing that might be potentially hazardous whilst using this equipment.
- DO NOT let children use this equipment in any manner other than intended.
- DO NOT install over concrete, asphalt, gravel or any other hard surface which may cause injury should a fall occur. Swing set shall be placed over protective soft material such as sand bed, soft woodbark, grass lawn. the depth of sand and soft woodbark shall be a minimum of 6 inches.
- DO NOT let children use this equipment until it has been properly assembled and anchored. Place equipment on level ground not less than 2M from any structures or obstacles such as fences, overhanging branches, laundry or electrical lines, garages, sheds or houses.
- Instruct children to NOT swinging empty seats as this may strike other children, or themselves. They may strike other children, or the play equipment may come back and strike you.
- Instruct children not to walk closely in front of, behind or in between moving swing seat. Instruct children to keep a safe distance away to avoid being struck by the items in use.
- Instruct children not to twist chains or ropes, or loop them over the support bar. This adds stress, reduces strength and may result in failure and cause injury.
- DO NOT allow children to stand on the swing seat.
- Instruct children not to get off the swing seat whilst in motion. DO NOT allow children to jump from moving swing seats.
- DO NOT allow children to climb or play on the equipment whilst wet (slips or falls may occur).
- DO NOT allow children to climb on or swing from structural members (eg legs, top bar and chin bars). These are structural components ONLY and NOT play features.
- DO NOT allow children to swing more than 60 degrees.
- After completion of assembly, ensure all hex nuts are tightened and in the correct position.
- DO NOT attach items to the playground equipment that are not specially designed for use with this equipment, such as, but not limited to, jump ropes, clotheslines, pet leashes, cables and chains as they may cause strangulation hazards.
- The minimum clearance from the seat to ground is 350mm.
- At the end of each play season, remove all plastic parts and take indoors. DO NOT allow the use of plastic items when the temperature drops below 32°F/0°C.
- Dispose of all packaging properly after the unit has been assembled.
- This equipment is for family domestic use and is intended for outdoor and indoor use.
- This equipment is for family domestic use and is intended for outdoor use only.
- Check all nuts and bolts for tightness and tighten when required.
- Check swing seats, chains, and other means of attachments for evidence of deterioration, replace when required in accordance with the manufacturer's instructions.
- This unit must be assembled by adults, ensure bolts and small components are kept out of reach of young children.
- Check all fixings regularly, tighten if necessary, and that the suspension system is secure.
- Check metal sections or components for signs of corrosion.
- Discontinue use if weakening or breakage found.
- Young children in play are unaware of potential dangers and hazards, therefore responsible adults supervision is essential. Never leave children unattended.
- Failure to comply with these precautions may result in injury.
- Disassemble and store indoors during the winter.
- Do not attach items to the equipment that are not specifically designed for use with this product, such as, but not limited to cables skipping ropes and chains as they may cause strangulation hazards
- Not suitable for hiring or commercial use.
- Never use the equipment in any manner other than intended.
- Shredded bark mulch, wood chips, fine sand or fine gravel are considered to be acceptable shock-absorbing surfaces when installed and maintained at a sufficient depth under and around playground equipment. However each material is only effective when properly maintained. Material should be checked periodically and replenished to maintain correct depth as determined necessary for your equipment, otherwise serious injuries may occur from a fall.
- Toys shall be accompanied by maintenance instructions drawing attention to the need of carrying out checks and maintenance of the main parts at regular intervals, if these checks are not carried out the toy could overturn and otherwise become a hazard. Whenever practical, the instructions shall also be affixed to the toy.
- Please retain these instructions for future reference.
- Warning! For domestic use only.

### Tightening Nuts & Bolts

- At the start of assembling, DO NOT tighten bolt/nut all the way, so to allow some possible adjustment for ease of assembly.
- After all major components are assembled, go back over all bolts and nuts properly tighten all of them before using this product.



## Maintenance

- Check all nuts and bolts twice monthly during the season and tighten as required. We recommend you check the swing beam and hardware every two weeks. It is particularly important that this procedure be followed at the beginning of each season
- Oil all metallic moving parts monthly during the usage period.
- Check all nuts and bolts twice monthly during the season to be certain they are in place. Replace when necessary. It is especially important to do this at the beginning of each new season.
- Check swing seats, ropes, cables and chains monthly during usage season for evidence of deterioration. Replacement should be made of any swing seat that has developed cracks in the plastic seat or has exposed metal in the edges of the swing seat. If there are already exposed metal inserts on the edge of the seat, immediately remove the seats and chains to prevent serious injury. Ropes, cables and chains should be removed and replaced if excessive wear is found. Contact OUR SERVICE CENTER for replacement parts.
- Maintaining the Play set on a level location is very important. As your children play, your Play set will slowly dig its way into soil, and it is very important that it settles evenly. Make sure the play set is level and true once each year or at the beginning of each play season.
- Hardware: inspect for tightness.
- Swing hangers: check to insure correct installation. Make sure that the bend of the swing hanger is positioned tightly against the stop washer and swing beam. The axis of the swing hanger bushing must be perpendicular to the swing motion. If squeaking occurs the nylon bushings can be sprayed with WD-40 or other house hold lubricant.
- The instructions and owner's manual for your new play set should be read in its entirety before assembly, to minimize problems and safety issues. We recommend reading the owner manual thoroughly after you have identified all of the parts for your play set as discussed in the HINTS AND TIPS AS LISTED BELOW.
- Check all coverings for bolts and sharp edges and replace when required.
- Do not adjust the length of the swing rope.
- Never use pliers to tighten up screws –these can cause damage to both the paintwork and the special anti-corrosion plating
- To help maintain the products appearance, occasionally clean the seats and metal framework with a damp cloth lightly – but DO NOT use abrasive chemical cleaners.
- When the time comes to disassemble and dispose of this product, please completely disassemble the unit and discard of it in a safe place and manner so as not to present any hazard to any individual. It is important to check and maintain the main parts at regular intervals. If these checks are not carried out, the toy could overturn or otherwise become a hazard. Whenever practical, the instructions shall also be affixed to the toy,also be affixed to the toy.

### Positioning Your Play Set

- Required at least 2 adults for assembly. Try to place in a flat area of your yard to minimize ground preparation.
- Place the equipment not less than 2M from any structure or obstruction such as a fence, garage, house, overhanging branches. Laundry lines, or electrical wires.

- The area that you choose should be policed for glass, rocks or anything jagged or sharp that could endanger your children's safety. The surface underneath your play system can cause or prevent injuries. We have additional suggestions in the suggested playground surfacing section.
- Do not build your play set on top of surfacing material.
- Please install this equipment facing away from the sun to avoid causing dizziness whilst playing.

## PRODUCT WARRANTY

All warranty coverage extends only to the original purchaser of the product and is not assignable or transferable. The original store or online purchase receipt must be kept as proof of purchase in order for the warranty to be valid. These documents must be presented in the event of making a claim under warranty.

During the warranty period, Sportspower will provide repair or replacement of defective equipment or parts thereof covered by the warranty. Any handling, transportation, delivery and other incidental charges in respect of the servicing of the equipment shall be borne by the Purchaser. If the product includes a number of accessories, only the defective part or accessory will be replaced.

The warranty will become void if any defects or damages are associated with the use of unauthorized replacement parts. All replacement parts must be obtained from Sportspower authorized agents.

All decisions made by Sportspower in respect of the servicing of the equipment (including repairs, replacements or issues relating to defects of workmanship or materials) shall be conclusive and the Purchaser agrees to be bound by such decisions. Any defective equipment or part thereof replaced shall become the property of Sportspower.

In the event of a product or accessory being replaced during the guarantee, the guarantee on the replacement will expire at the original date, i.e. 90 days from the original purchase date.

This warranty excludes defects caused by the product not being used in accordance with instructions, accidental damage, misuse or being tampered with by unauthorized persons.

The Sportspower Limited Warranty does not cover:

(a) Products used for commercial or rental purposes.

(b) Loss or damage to product due to: (i) abuse, repairs and/or tampering by any person other than the authorized personnel of Sportspower; (ii) negligence and/or misuse (including foreign object, accident, improper storage, exposure to sun/moisture, excessive temperature, sand, dust, dirt, other pollution or other environmental conditions and failure to follow precautions or proper operating instructions stated in the User's Manual such as improper installations); (iii) fire, flood, lightning strike, wind storm or other acts of God; (iv) freight or improper transport damages, and (v) improper usage (including use by under-age, over-weight or excessive number of users permitted as stated in the User's Manual).

(c) Defects, damages or accidents due to the malfunction, connection to or use of non-Sportspower or unauthorized parts. In such event, Sportspower reserves the right to cancel the Limited Warranty coverage immediately.

To the extent allowed by the applicable local law, the remedies in the Limited Warranty are the Purchaser's sole and exclusive remedies.

SPORTSPOWER IS NOT RESPONSIBLE OR LIABLE FOR INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE PRODUCT OR OTHER DAMAGES WITH RESPECT TO ANY ECONOMIC LOSS, LOSS OF PROPERTY, LOSS OF REVENUE OR PROFITS, LOSS OF ENJOYMENT OR USE, COST OF REMOVAL, INSTALLATION OR OTHER CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. ACCORDINGLY, THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

THE WARRANTY EXTENDED HEREUNDER IS IN LIEU OF ALL OTHER WARRANTIES AND ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED IN ITS SCOPE AND DURATION TO THE TERMS SET FORTH HEREIN. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS. ACCORDINGLY, THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE. THIS WARRANTY IS VALID ONLY IN THE UNITED STATES.

**CUSTOMER SERVICE/ SPARE PARTS -(+44) 0330 0904 420**

**Geemac Sales & Marketing Ltd.**

**20 Queensbridge Bedford Road Northampton,**

**United Kingdom, NN4 7BF**

Sportspower Ltd.  
20/F, Parkview Centre, 7 Lau Li Street, Causeway Bay, Hong Kong  
[www.sportspowerltd.net](http://www.sportspowerltd.net)