

 
ASSEMBLY INSTRUCTION

DESCRIPTION 6VKYY SAUCER SWING


45 minutes

APPROXIMATE ASSEMBLY TIME

2 PERSON ASSEMBLY

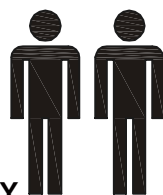


FLOOR AREA
2.5M X 1.5M X 1.5M

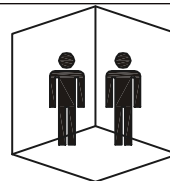 


REQUIRED ASSEMBLY SPACE

WEIGHT 19 KG, BUILD IN LOCATION

 REQUIRED ASSEMBLY TOOLS

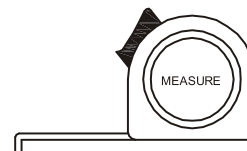

ASSEMBLED DIMENSIONS

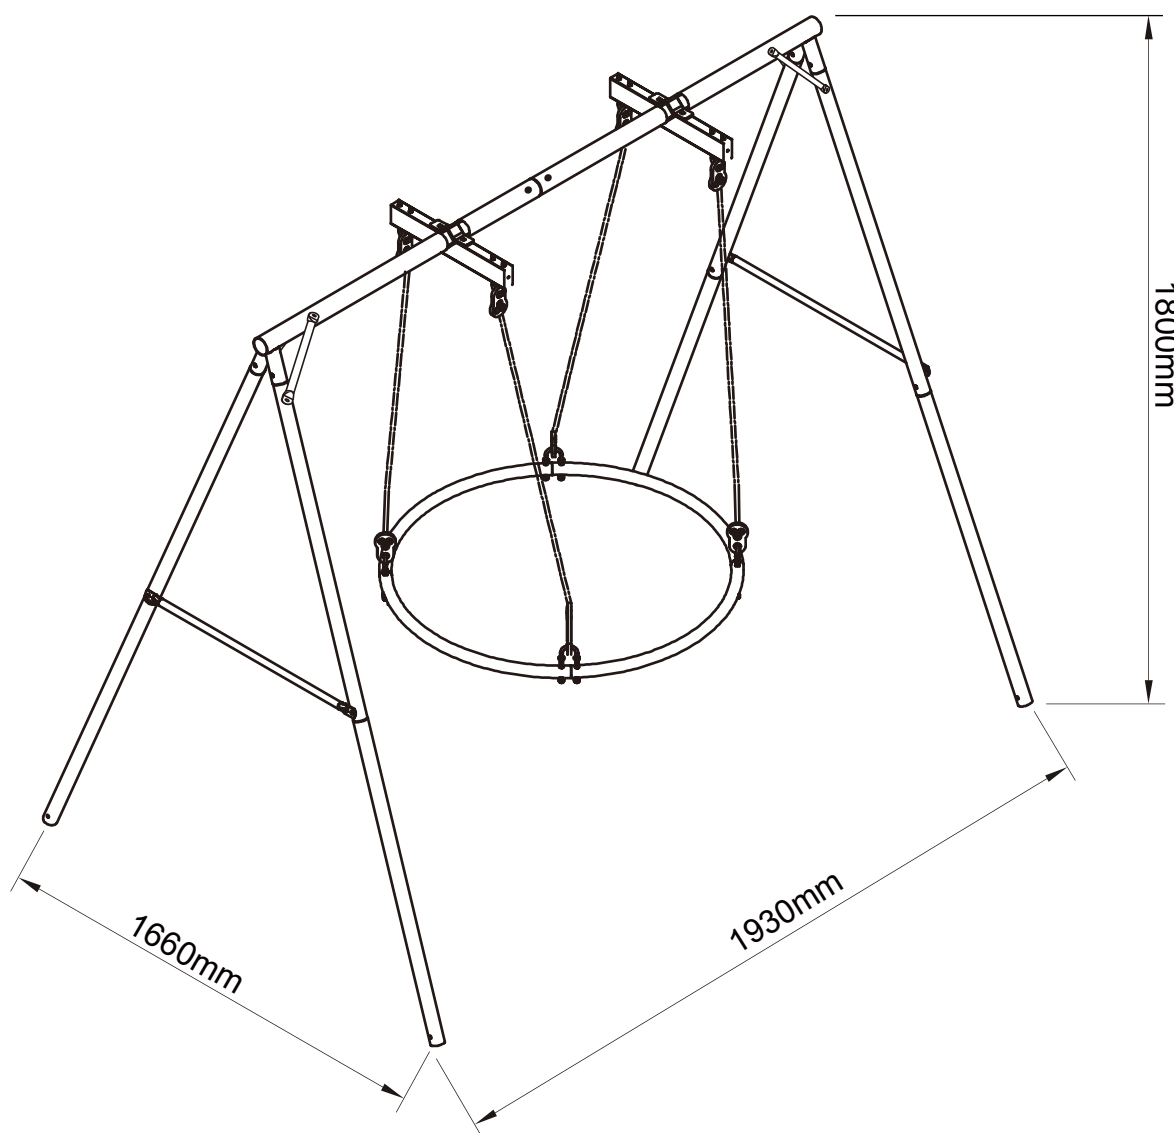 


SPORTSPOWER™

20/F, Parkview Centre, 7 Lau Li Street, Causeway Bay, Hong Kong.
After Service Centre (+44) 01702 208182

ASSEMBLY INSTRUCTION

 
DESCRIPTION 6VKYY SAUCER SWING

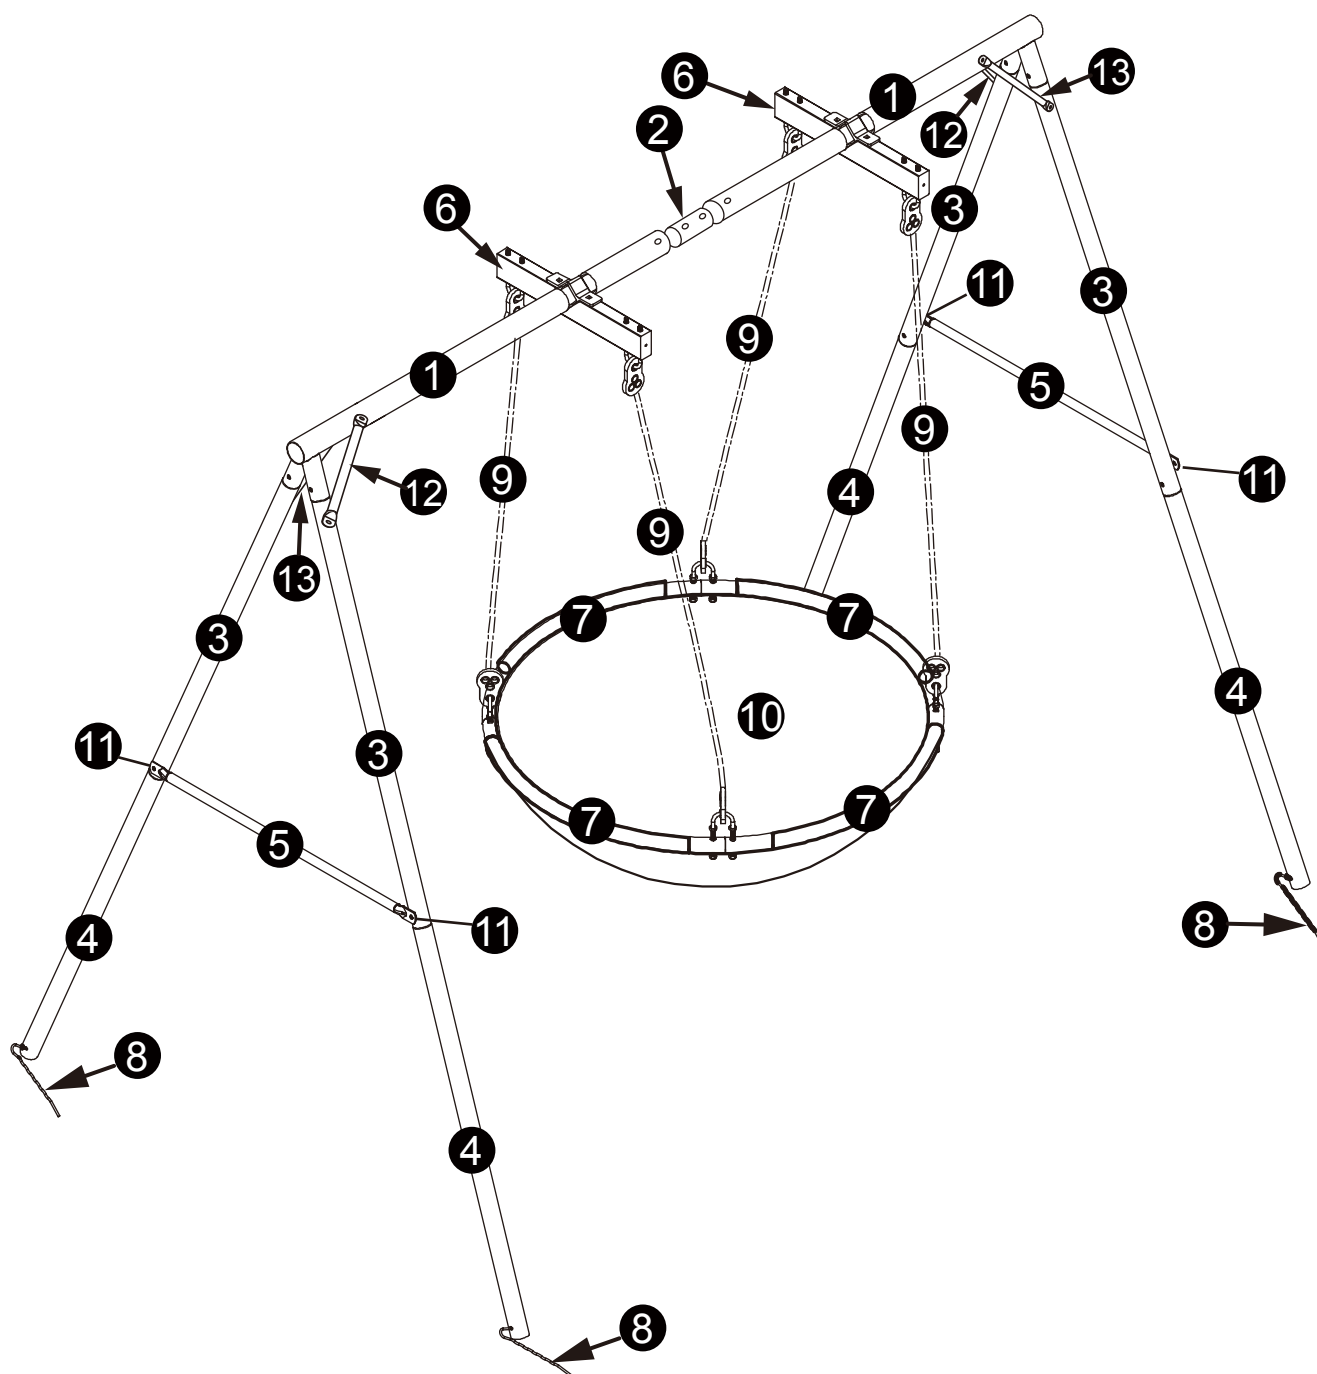

ASSEMBLY INSTRUCTION

DESCRIPTION 6VKYY SAUCER SWING

 PART LIST



① Cross Bar x 2



 
③ Top Leg x 4



⑤ Cross Rail x 2



⑦ Curved bar x 4




⑨ Rope x 4



⑪ Plastic cap x 12



 
⑬ Top Cross Bar (right) x 2



② Cross Bar x 1



 
④ Lower Leg x 4



⑥ Beam x 2



 ⑧ Anchor Peg x 4

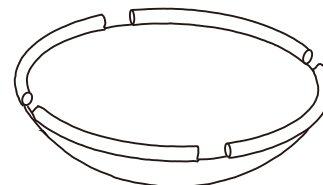

⑩ Fabric Saucer x 1





 










⑫ Top Cross Bar (left) x 2

ASSEMBLY INSTRUCTION

DESCRIPTION 6VKYY SAUCER SWING

HARDWARE LIST

<p>A</p>  <p>x 10 (M8x50mm) BOLT</p>	<p>B</p>  <p>x 4 (M8x45mm) BOLT</p>	<p>C</p>  <p>x 4 (M8x82mm) BOLT</p>
<p>D</p>  <p>x 4 (M8x114mm) BOLT</p>	<p>E</p>  <p>x 4 (M8x85mm) BOLT</p>	<p>M</p>  <p>x 2 (M8x60mm) BOLT</p>
<p>F</p>  <p>x 36 (Ø18 / Ø8×1.5mm)</p>	<p>G</p>  <p>x 24 (Ø19 / Ø8.3×1.5mm)</p>	<p>H</p>  <p>x 36 (M8)</p>
<p>I</p>  <p>x 36 (Ø6.5 / Ø10.5×1.5mm)</p>	<p>J</p>  <p>x 12 (30×22×3.0mm)</p>	<p>K</p>  <p>x 1 (10#/13#)</p>
<p>L</p>  <p>x 1 (6mm)</p>		

ASSEMBLY INSTRUCTION

DESCRIPTION 6VKYY SAUCER SWING

WARNING!

Please read this instruction manual before you start to assemble or use this swing set. You must follow all of the safety instructions while using this equipment. Be absolutely sure that the surface on which this swing set is set up on is properly surfaced with fine sand, wood chips or double shredded bark mulch. Do not use this swing set on hard packed soil concrete or any other kind of hard surface. Read all cautionary statements before using this equipment.

Observing the following statements and warnings reduces the likelihood of serious injury.

1. **Suitable for children aged 3-8 years.** No more than two users with combined weight of 90kg.
2. Not suitable for children under the age of 36 months because of small part(s)-choking hazard.
3. Adult supervision is required at all times whilst the product is use. Never Leave children unattended during play.
4. For outdoor use only.
5. Check all nuts, bolts and fittings for tightness and tighten before use.
6. Check all coverings for bolts and sharp edges and replace when required.
7. Oil all metallic moving parts.
8. Check swing seats, ropes and other means of attachments for evidence of deterioration. Replace when required in accordance with the manufacture's instructions.
9. Please take note: As an extra precaution, check this toy regularly for signs of wear and damage.
10. Place the product on a level surface at Least 2 metres from any structures or obstructions such as a fence, garage, house, overhanging branches, laundry line or electrical wires.
11. For safety reasons, this swing **MUST** be anchored into the ground.
12. Anchors shall be placed level with or under the ground in order to reduce the risk of tripping.
13. Ensure the child is not facing the sun when on the swing.
14. Leave all fittings finger-tight until assembly is complete, for ease of construction.
After all major components are assembled, go back over all bolts and nuts and properly tighten all of them before using the product.
15. **DO NOT** install the product on concrete, asphalt or hard surfaces.
16. **DO NOT** allow children to stand on the swing seats.
17. **DO NOT** allow children to get off the swings while they are still moving.
18. **DO NOT** twist swing ropes or wrap them over the top bar.
19. **DO NOT** allow loose, hooded or baggy clothes to be worn since children can get trapped and may be unable to free themselves.
20. **DO NOT** allow children to climb on this equipment.
21. **DO NOT** allow children to wander into the play area when the equipment is in use.

ASSEMBLY INSTRUCTION

DESCRIPTION 6VKYY SAUCER SWING



- 22.Swing must not exceed an angle of 60 degrees from the ground.
- 23.Failure to assemble and maintain this item as per these instructions may cause injury to the user.
- 24.Packaging materials are not toys. Please remove all packaging and packing tags/wires before giving this toy to your child.
- 25.Adult assembly required.
- 26.For use under adult supervision.
- 27.Maintenance to be carried out under the direct supervision of a responsible adult.
- 28.For family domestic use only.
- 29.Once assembly is complete, carefully check the equipment before use. If you find any problems, do not allow children to use the equipment until it is fit for use.
- 30.Do not let children use the equipment until it has been fully assembled.
- 31.Remove all assembly tools once fully assembled.
- 32.Do not attach items to the equipment that are not specifically designed for use with this product. Such as, but not limited to skipping ropes and chains as they may cause strangulation hazards.
- 33.Not suitable for hiring or commercial use.
- 34.Never use the equipment in any manner other than intended.
- 35.Do not use the product when temperatures are expected to drop below 0 degrees C. Remove all plastic parts and place indoors during freezing temperatures.
- 36.Shredded bark mulch, wood chips, fine sand or fine gravel are considered to be acceptable shock-absorbing surface when installed and maintained at a sufficient depth under and around playground equipment. However each material is only effective when properly maintained. Material should be checked periodically and replenished to maintain correct depth as determined necessary for your equipment Otherwise serious injuries may occur from a fall.
37. All main parts of this swing should be checked and maintained regularly, if these checks are not carried out the toy could overturn or otherwise become a hazard.
38. Do not adjust the length of the swing rope.
39. Please keep assembly and installation instruction for further reference.
40. **At least 2 adult assembly.**





**TIPS: BEFORE STARTING ASSEMBLY PLEASE CHECK ALL PARTS ARE INCLUDED,
IF ANY PARTS ARE MISSING, PLEASE CALL (+44) 01702 208182**

ASSEMBLY INSTRUCTION

DESCRIPTION 6VKYY SAUCER SWING

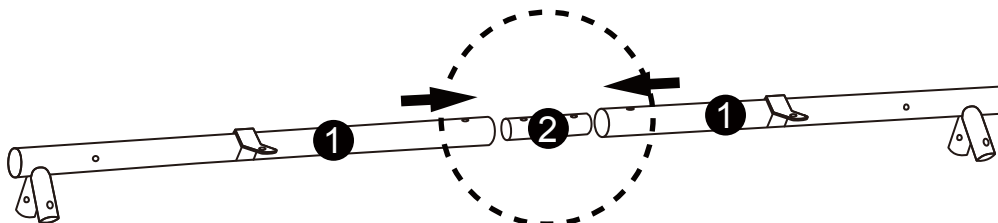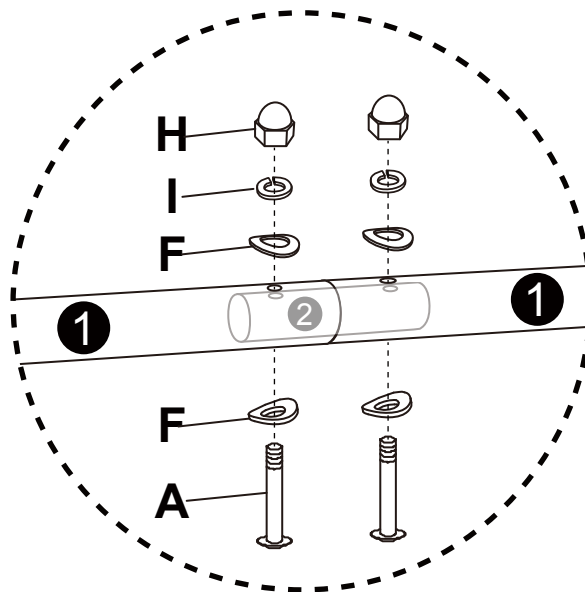 step 1








			
A	F	I	H
x 2pcs	x 4pcs	x 2pcs	x 2pcs

ASSEMBLY INSTRUCTION

 DESCRIPTION 6VKYY SAUCER SWING

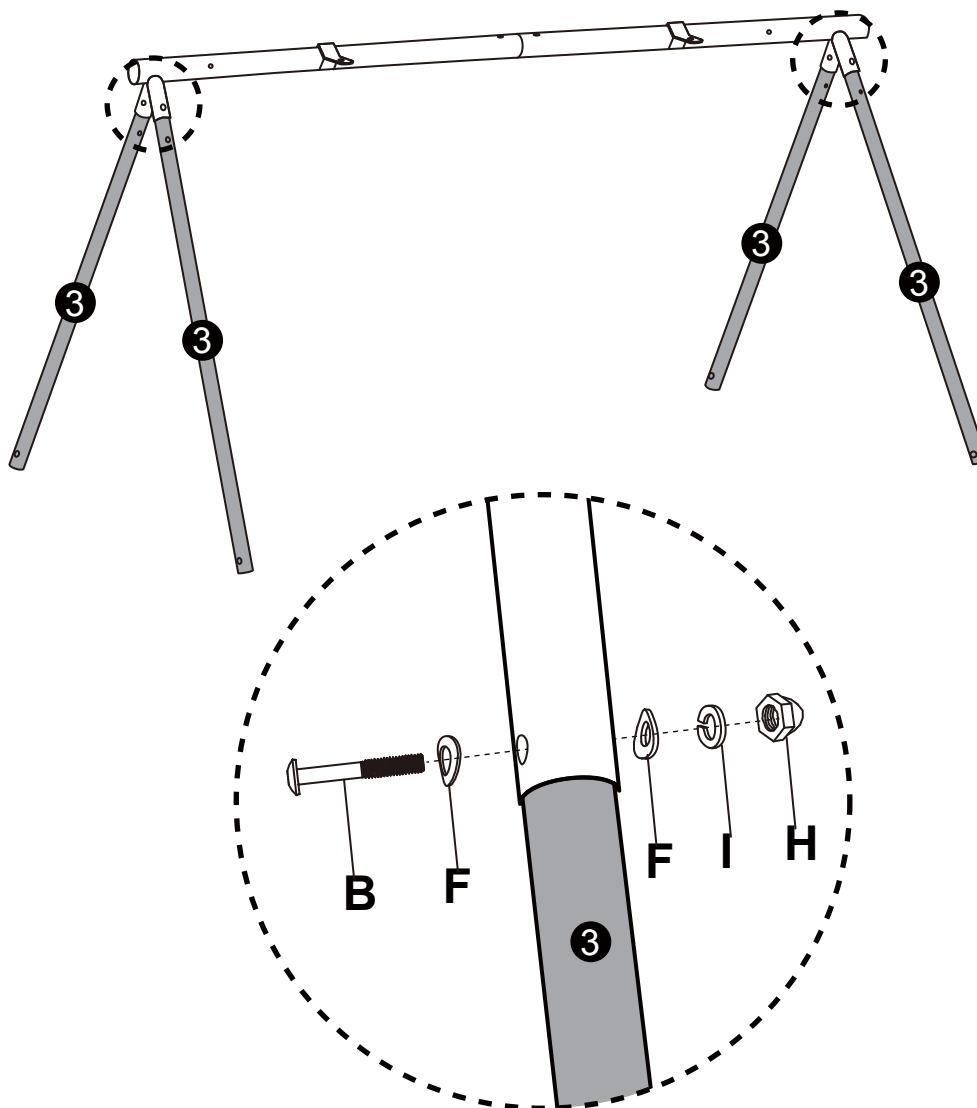 step 2




			
B	F	I	H
x 4pcs	x 8pcs	x 4pcs	x 4pcs

ASSEMBLY INSTRUCTION

DESCRIPTION 6VKYY SAUCER SWING

 step 3


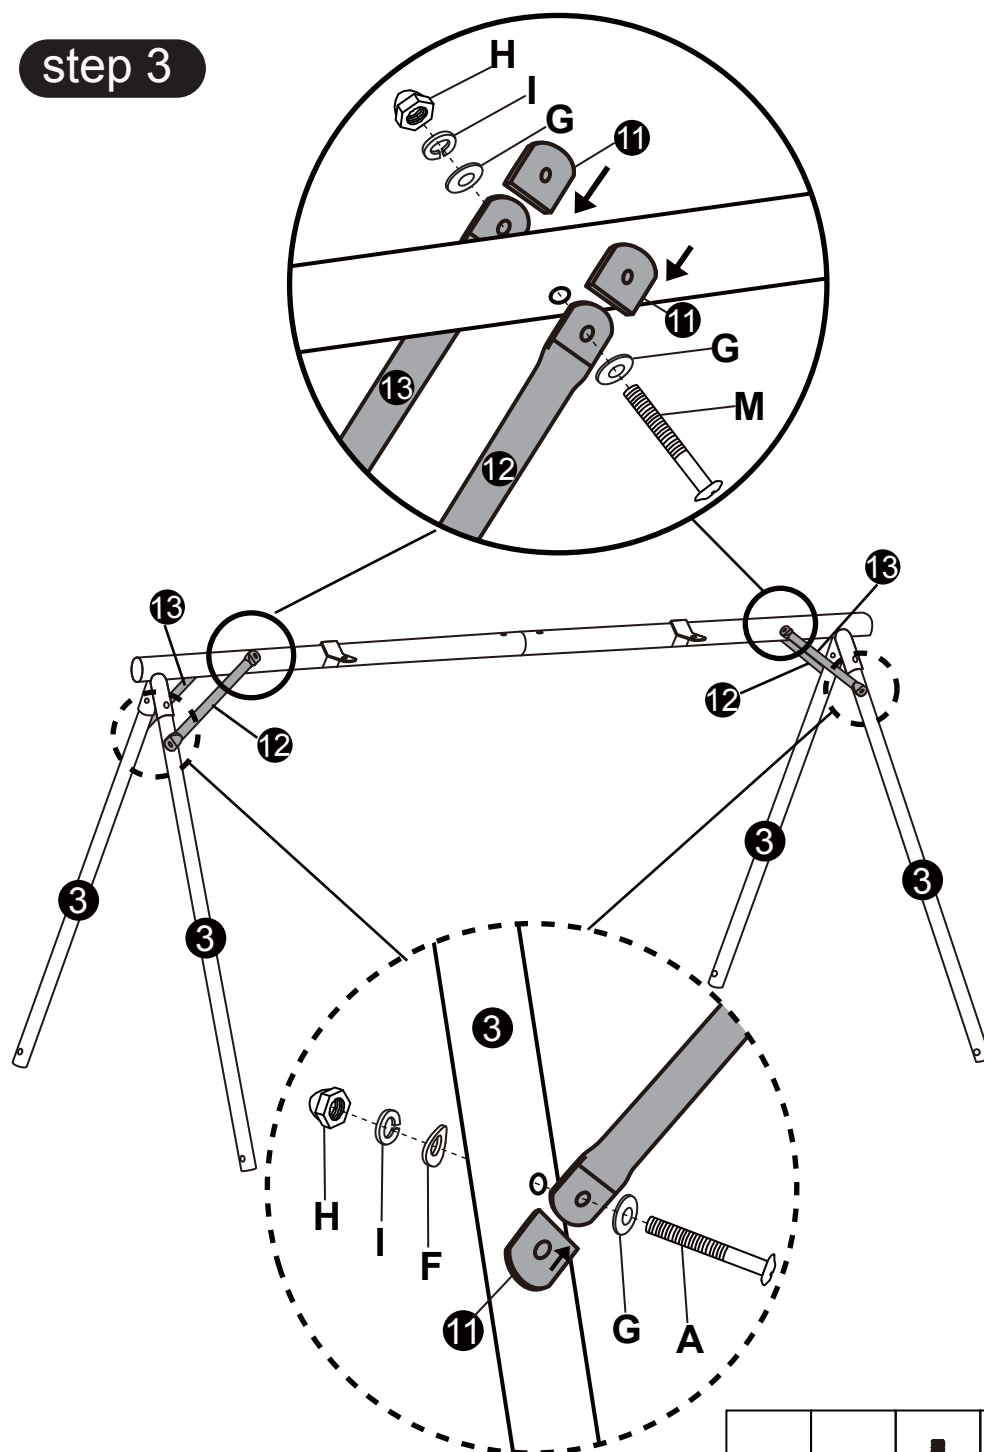







11	A	M	G	F	I	H
x 8pcs	x 4pcs	x 2pcs	x 8pcs	x 4pcs	x 6pcs	x 6pcs

  ASSEMBLY INSTRUCTION

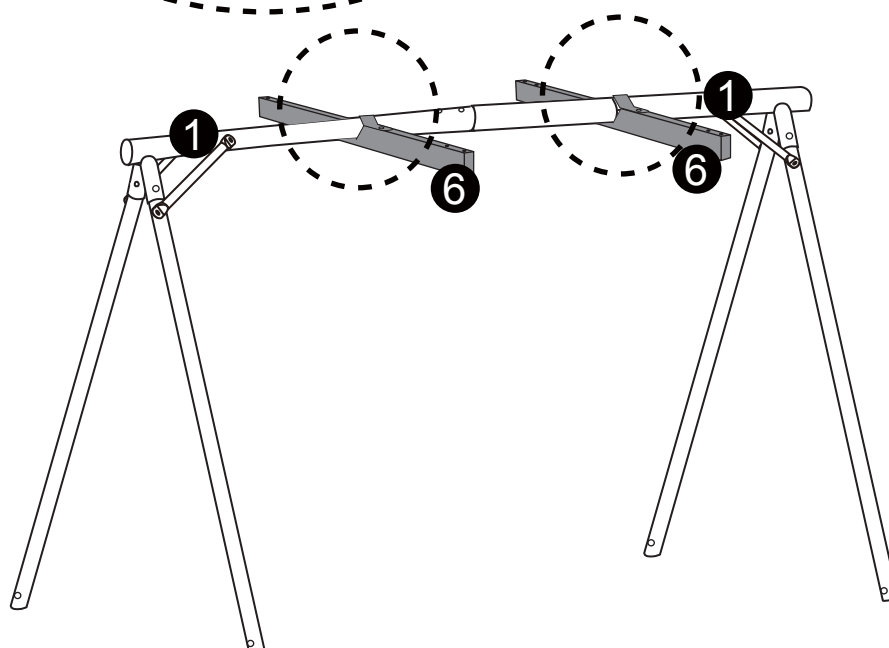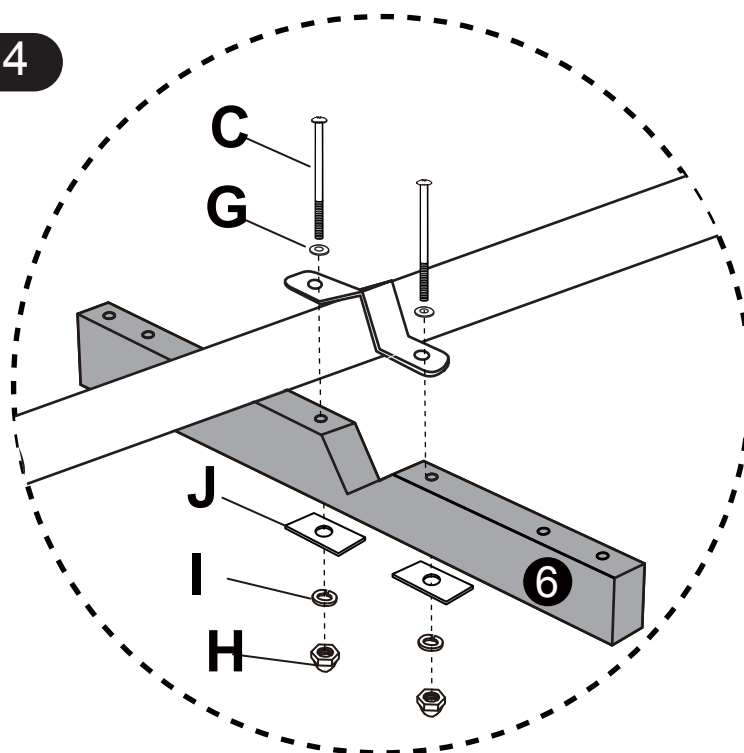DESCRIPTION 6VKYY SAUCER SWING

step 4



				
C	G	J	I	H
x 4pcs	x 4pcs	x 4pcs	x 4pcs	x 4pcs

 
ASSEMBLY INSTRUCTION

DESCRIPTION 6VKYY SAUCER SWING

step 5

Note:

- Plastic cap (11) needs to be inserted into rail (5) before securing the bolt.
- Cross rail (5) needs to be attached to the outer sides of the swing frame.

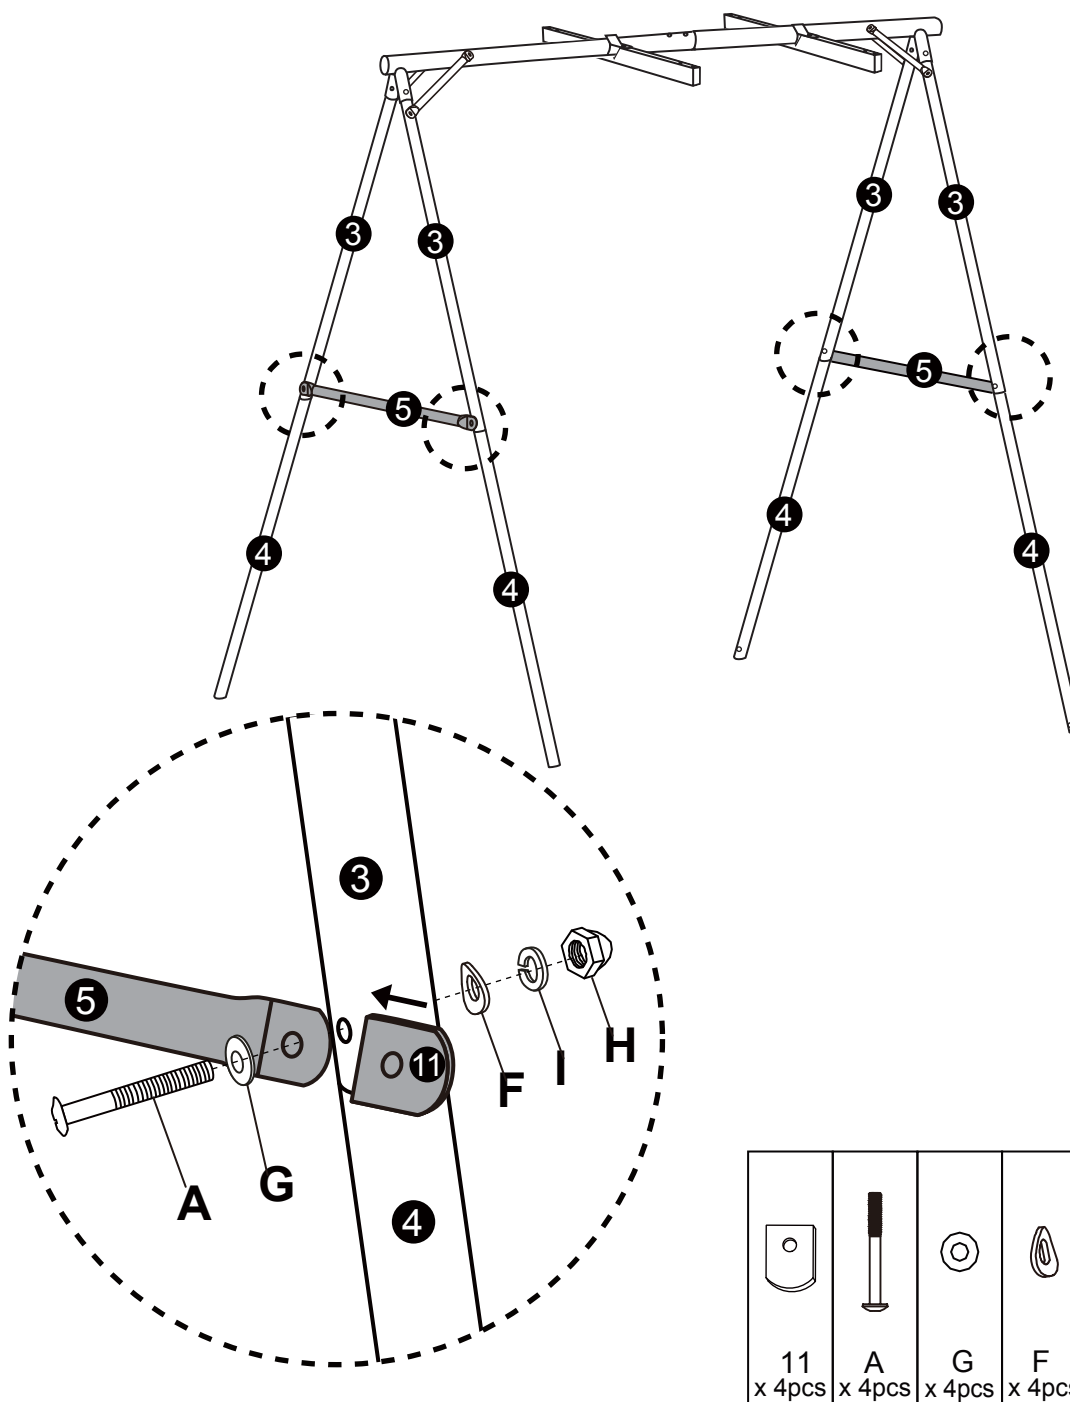


11 x 4pcs	A x 4pcs	G x 4pcs	F x 4pcs	I x 4pcs	H x 4pcs

ASSEMBLY INSTRUCTION

DESCRIPTION 6VKYY SAUCER SWING

 
step 6

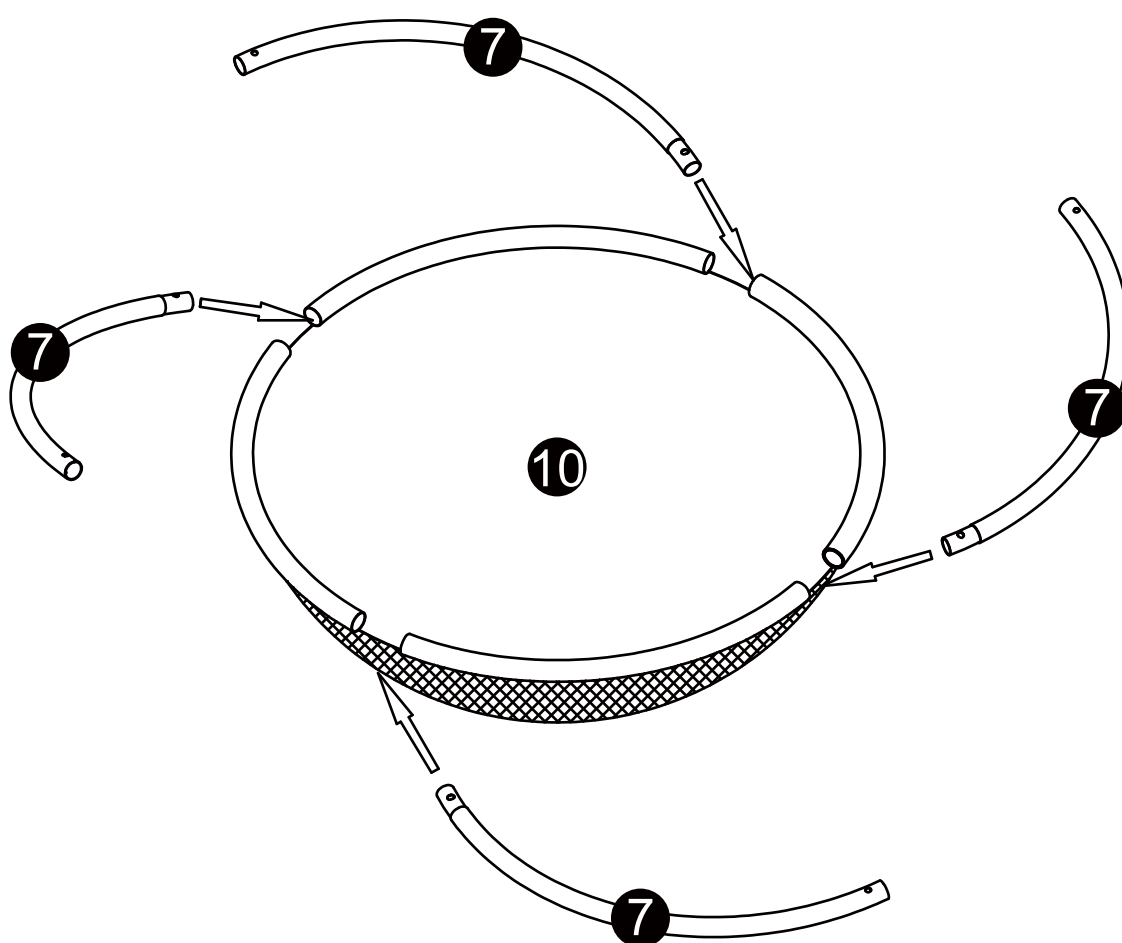





ASSEMBLY INSTRUCTION

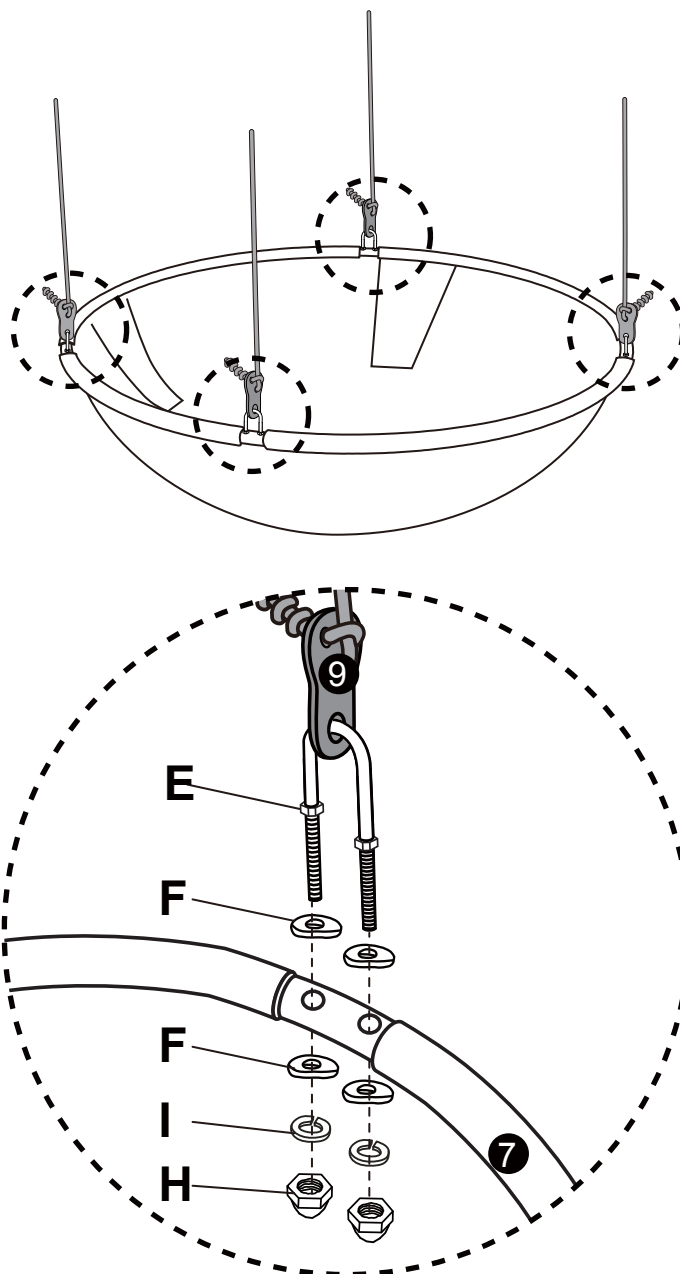 DESCRIPTION 6VKYY SAUCER SWING

step 7









			
E	F	I	H
x 4pcs	x 16pcs	x 8pcs	x 8pcs

 ASSEMBLY INSTRUCTION

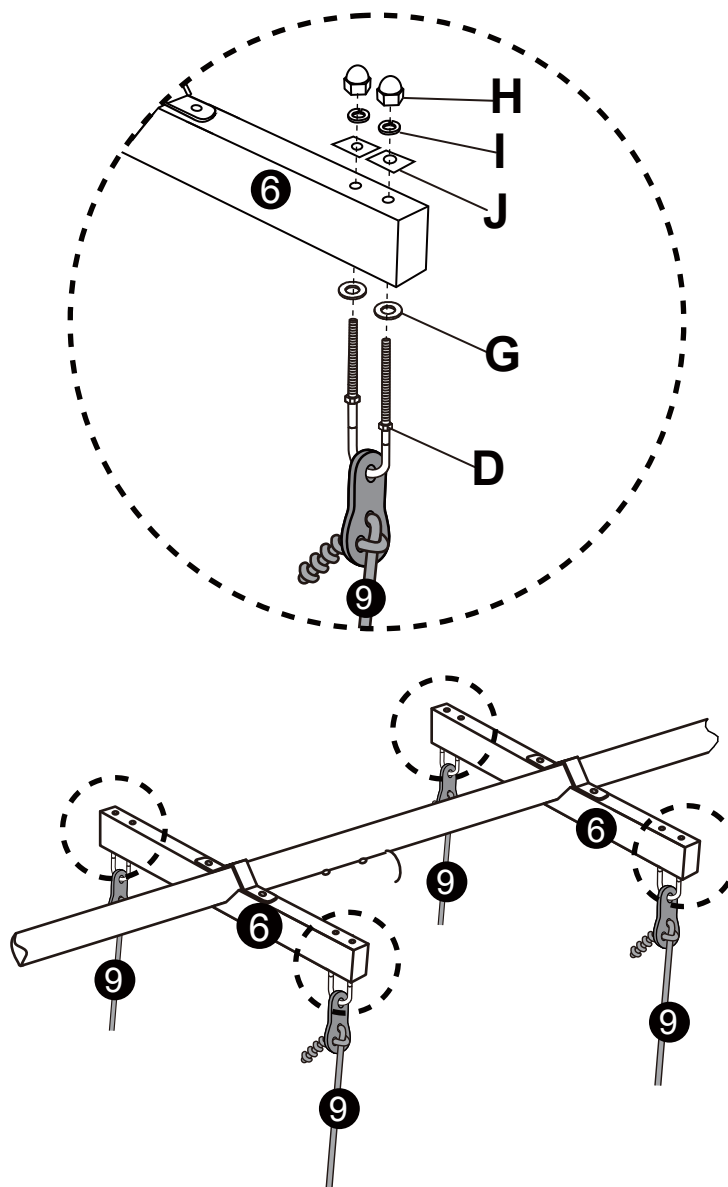DESCRIPTION 6VKYY SAUCER SWING

step 8







				
D x 4pcs	G x 8pcs	J x 8pcs	I x 8pcs	H x 8pcs

ASSEMBLY INSTRUCTION

DESCRIPTION 6VKYY SAUCER SWING

    step 9

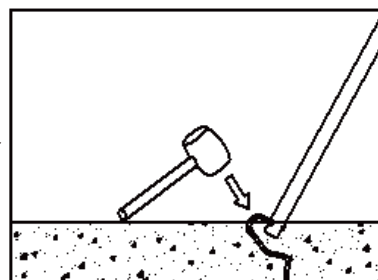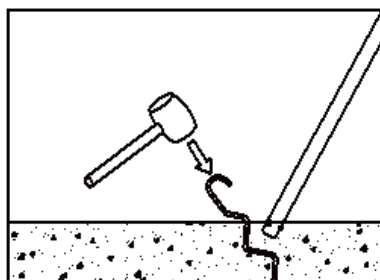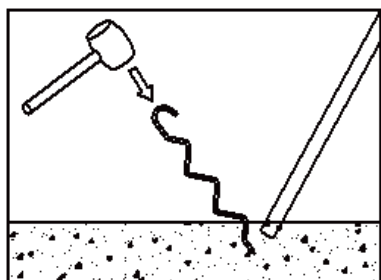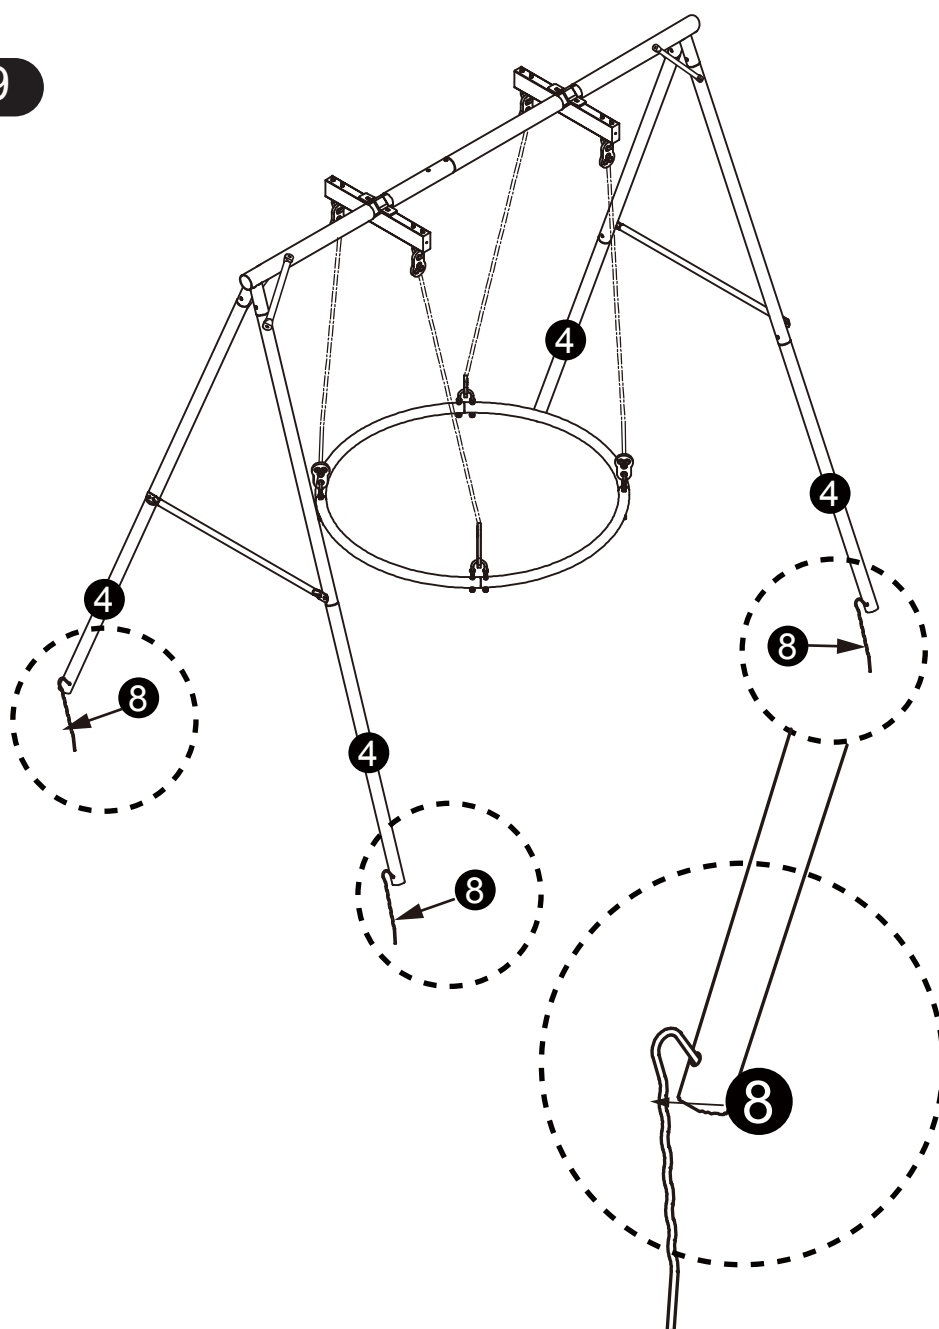

ASSEMBLY INSTRUCTION

DESCRIPTION 6VKYY SAUCER SWING

 
SEAT ADJUSTABLE GUIDE

THE LENGTH OF THE ROPE IS ADJUSTABLE FOR THE HEIGHT OF THE CHILD THROUGH THE SEAT CONNECTOR.

TO ADJUST, LOOSEN THE KNOT ON THE SEAT CONNECTOR, PULL ROPE THROUGH THE HOLES AND TIGHTEN AGAIN.

MAKE SURE THAT THE KNOTS ARE TIGHT AND THAT BOTH ROPES ARE ADJUSTED SO THAT THE SEAT IS HORIZONTAL.

IMPORTANT: MINIMUM CLEARANCE BETWEEN THE FOOTREST/SEAT AND THE GROUND SHOULD BE 35 CM.

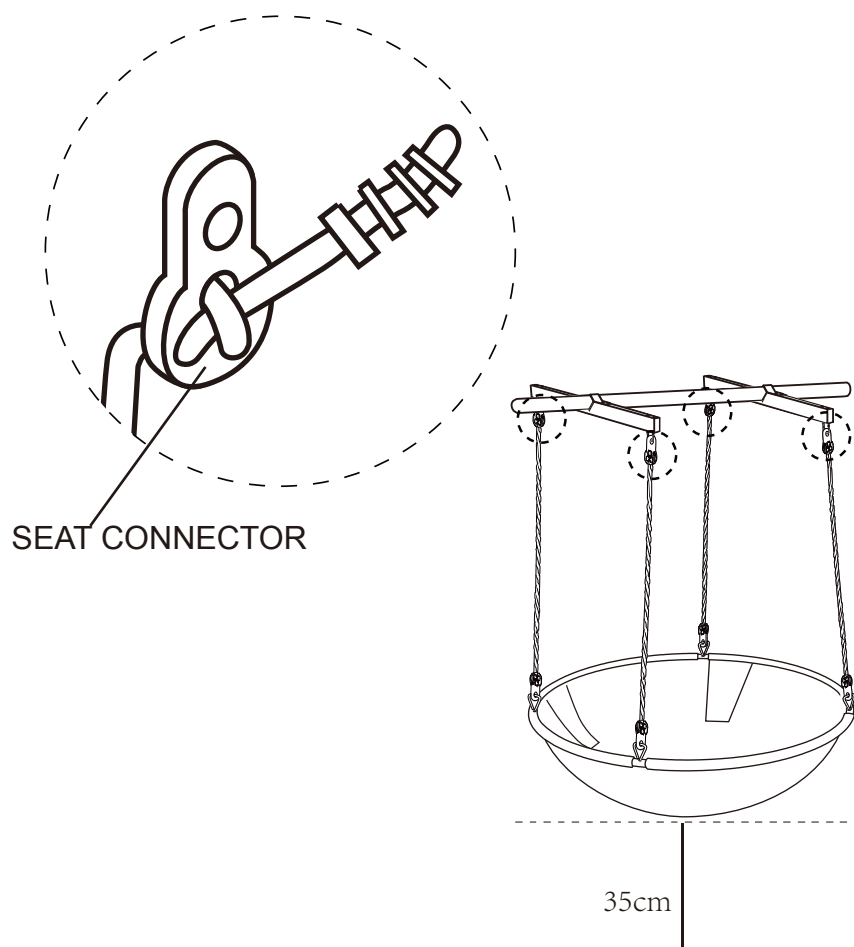

SP-19-SW023-SD-16001