ASSEMBLY INSTRUCTION

DESCRIPTION
M7TEJ
MULTIPLAY WITH SWINGS, GLIDER, SLIDE & BASKETBALL NET

90 minutes
APPROXIMATE ASSEMBLY TIME

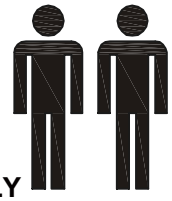
2 PERSON ASSEMBLY

FLOOR AREA
4M X 3M X 3M

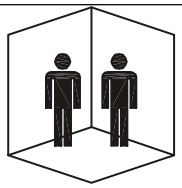
REQUIRED ASSEMBLY SPACE

WEIGHT 27 KG, BUILD IN LOCATION

REQUIRED ASSEMBLY TOOLS

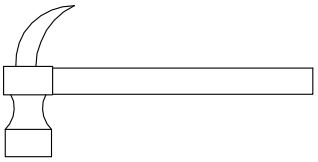

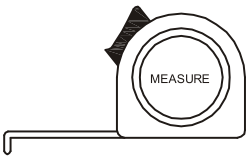

ASSEMBLED DIMENSIONS

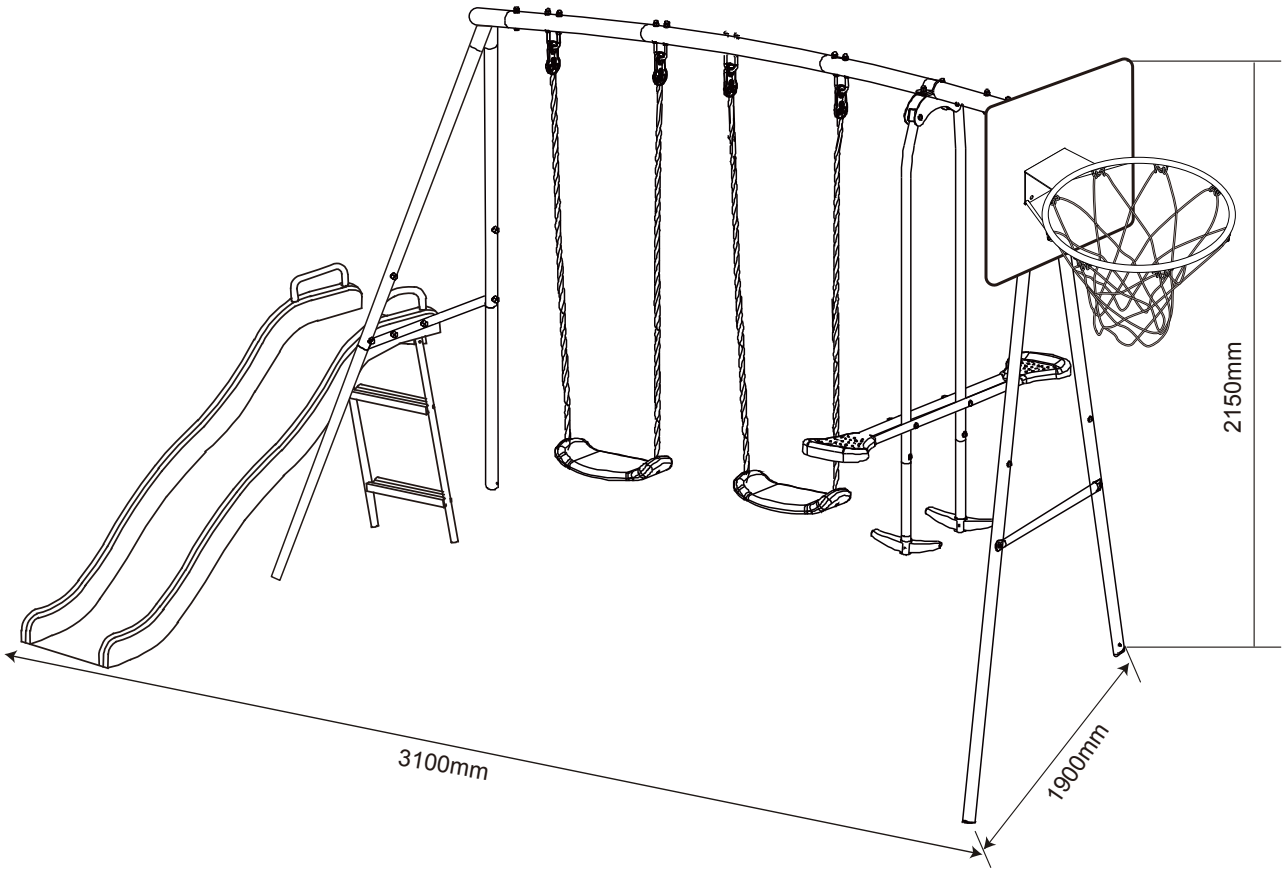

SPORTSPOWER™

20/F, Parkview Centre, 7 Lau Li Street, Causeway Bay, Hong Kong.
After Service Centre (+44) 0330 0904 420, Email support@sportspowerfit4kids.com or visit www.sportspowerfit4kids.com

ASSEMBLY INSTRUCTION

DESCRIPTION
M7TEJ
MULTIPLAY WITH SWINGS, GLIDER, SLIDE & BASKETBALL NET

- We suggest you spend some time reading this guide before following the simple step-by-step assembly instructions.
- Do not discard any of the packaging until you have checked that you have all parts and fittings listed. When discarding packaging take care and consideration for others and the environment.
- When assembling this equipment be aware of the safety of yourself and others.
- Because of the size of this multiplay we suggest that you assemble it in the area intended for use.
- Some of the assembly will be easier with two people. Seek assistance when lifting large or heavy items.
- Assemble this multiplay on a clean, flat and level surface e.g. the cardboard packaging.
- Keep any tools provided or spare fittings for future use. Only use the tools specified.
- Assemble all parts loosely, by hand, before tightening any bolts or fixings.
- we would suggest storing your multiplay inside or under a suitable cover during winter to help protect against damage and maintain its aesthetic appearance. For details of how to maintain your playset, please refer to “maintenance section”.

BEFORE STARTING ASSEMBLY, PLEASE CHECK ALL PARTS ARE INCLUDED. IF ANY PARTS ARE MISSING PLEASE CONTACT THE HELPLINE ON (+44) 0330 0904 420.

ASSEMBLY INSTRUCTION

DESCRIPTION
M7TEJ
MULTIPLAY WITH SWINGS, GLIDER, SLIDE & BASKETBALL NET

- WARNING! Not suitable for children under 36 months. Small parts/long cord-Strangulation Hazard.
- This unit is designed to be used by up to 5 children between ages 3 to 8. Maximum weight of 45kg each, simultaneously not to exceed a combined weight of 225kg.
- Adult supervision is required at all times. Never leave children unattended.
- WARNING! Only for outdoor use.
- WARNING! Only for domestic use.
- Teach children to sit in the centre of the swing play items, with their full weight in the centre of the seats. DO NOT allow children to lean to the side when on play items or to collide with other playmates. DO NOT allow children to stand on the swing seat and slide.
- DO NOT allow children to slide down the slide head first.
- Dress children appropriately while on and around this equipment. DO NOT allow children to wear ponchos, scarves, jewelry, loose shoes, jackets or clothing with loose strings and/or clothing that might be potentially hazardous whilst using this equipment.
- DO NOT let children use this equipment in any manner other than intended.
- DO NOT install over concrete, asphalt, gravel or any other hard surface which may cause injury should a fall occur. Swing set shall be placed over protective soft material such as sand bed, soft woodlark, and grass lawn. The depth of sand and soft woodlark shall be a minimum of 6 inches.
- The anchor shall be placed level with or under the ground in order to reduce tipping hazards.
- DO NOT let children use this equipment until it has been properly assembled and anchored. Place equipment on level ground not less than 2M from any structures or obstacles such as fences, overhanging branches, laundry or electrical lines, garages, sheds or houses.
- Do not allow children to swing empty play items as they may strike other children or bounce back off the frame and strike the child.
- Instruct children not to walk closely in front of, behind or in between moving play equipment. Instruct children to keep a safe distance away to avoid being struck by the items in use.
- Instruct children not to twist chains or ropes, or loop them over the support bar. This adds stress, reduces strength and may result in failure and cause injury.
- Instruct children not to get off play equipment whilst in motion. DO NOT allow children to jump from moving play equipment.

- DO NOT allow children to climb or play on the equipment whilst wet (slips or falls may occur).
- DO NOT allow children to climb on or swing from structural members (e.g. legs, top bar, basketball hoop,etc.) These are structural components ONLY and NOT play features.
- DO NOT allow children to swing play equipment more than 60 degrees.
- After completion of assembly, ensure all bolts and nuts are tightened and in the correct position.
- DO NOT attach items to the playground equipment that are not specifically designed for use with this equipment, such as, but not limited to, jump ropes, clotheslines, pet leashes, cables and chains as they may cause strangulation hazards.
- At the end of each play season, remove all plastic parts and take indoors. DO NOT allow the use of plastic items when the temperature drops below 0 degrees.
- Dispose of all packaging properly after the unit has been assembled
- Please retain the assembly manual for future reference and review each season.
- Do not orientate the slide towards the sun, this may lead to a child becoming dizzy/disorientated through extended use.
- This product cannot be modified.

MAINTENANCE

- Check all nuts and bolts for tightness and tighten when required.
- Check swing seats, chains, and other means of attachments for evidence of deterioration, replace when required in accordance with the manufacturer's instructions.
- This unit must be assembled by adults, ensure bolts and small components are kept out of reach of young children.
- Check all fixings regularly, tighten if necessary, and that the suspension system is secure.
- Check metal sections or components for signs of corrosion.
- Discontinue use if weakening or breakage found.
- Young children in play are unaware of potential dangers and hazards, therefore responsible adults supervision is essential.
- Failure to comply with these precautions may result in injury Disassemble and store indoors during the winter.
- Not suitable for hiring or commercial use.
- Never use the equipment in any manner other than intended.

- Shredded bark mulch, wood chips, fine sand or fine gravel are considered to be acceptable shock-absorbing surfaces when installed and maintained at a sufficient depth under and around playground equipment. However each material is only effective when properly maintained. Material should be checked periodically and replenished to maintain correct depth as determined necessary for your equipment. Otherwise serious injuries may occur from a fall.
- Toys shall be accompanied by maintenance instructions drawing attention to the need of carrying out checks and maintenance of the main parts at regular intervals; if these checks are not carried out the toy could overturn and otherwise become a hazard. Whenever practical, the instructions shall also be affixed to the toy.
- Please retain these instructions for future reference.

TIGHTENING NUTS & BOLTS

- At the start of assembly DO NOT tighten nuts or bolts fully, so as to allow some possible adjustment for ease of assembly.
- After all major components are assembled, go back over all bolts and nuts and properly tighten all of them before using this product.

ASSEMBLY INSTRUCTION

DESCRIPTION
M7TEJ
MULTIPLAY WITH SWINGS, GLIDER, SLIDE & BASKETBALL NET

① X1 VIEW PRODUCT  Top Right Beam	② X1 VIEW PRODUCT  Upper Tube	③ X1 VIEW PRODUCT  Top Left Beam
④ X1 VIEW PRODUCT  Bracket	⑤ X4 VIEW PRODUCT Upper Leg	⑥ X4 VIEW PRODUCT  Lower Leg
⑦ X1 VIEW PRODUCT  Cross Bar – With Two Holes For Connecting Slide	⑧ X1 VIEW PRODUCT  Cross Bar	⑨ X2 VIEW PRODUCT  Glide Top Tube
⑩ X2 VIEW PRODUCT Plastic Connector	⑪ X2 VIEW PRODUCT  Glide Seat Tube	⑫ X2 VIEW PRODUCT  Glide Lower Tube
⑬ X2 VIEW PRODUCT  Glide Seat	⑭ X2 VIEW PRODUCT Footrest	⑮ X2 VIEW PRODUCT 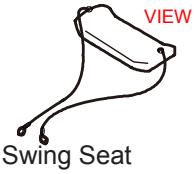 Swing Seat
⑯ X4 VIEW PRODUCT Plastic Connector	⑰ X4 VIEW PRODUCT Plastic Cap	⑱ X2 VIEW PRODUCT Long Plastic Sleeve
⑲ X2 VIEW PRODUCT Short Plastic Tube	⑳ X1 VIEW PRODUCT  Basketball Board	㉑ X1 VIEW PRODUCT Basketball Net
㉒ X1 VIEW PRODUCT 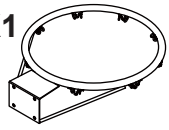 Basketball Hoop	㉓ X4 VIEW PRODUCT Anchor	

ASSEMBLY INSTRUCTION

DESCRIPTION
M7TEJ
MULTIPLAY WITH SWINGS, GLIDER, SLIDE & BASKETBALL NET

A X10 VIEW PRODUCT  M8×50mm	B X4 VIEW PRODUCT M8×54mm	C X4 VIEW PRODUCT  M8×114mm
D X2 VIEW PRODUCT M8×95mm	E X2 VIEW PRODUCT M8×20mm	F X4 VIEW PRODUCT M6×36mm
G X2 VIEW PRODUCT -  M6×60mm	H X2 VIEW PRODUCT  M6×36mm	I X40 VIEW PRODUCT Φ8.5xΦ19mm
J X12 VIEW PRODUCT  Φ8.5xΦ19mm	K X12 VIEW PRODUCT Φ6.5xΦ14mm	L X26 VIEW PRODUCT Φ8.5 x Φ13.5mm
M X8 VIEW PRODUCT Φ6.5 x Φ10 mm	N X26 VIEW PRODUCT M8	O X8 VIEW PRODUCT M6
P X1 VIEW PRODUCT	Q X1 VIEW PRODUCT	R X4 VIEW PRODUCT M5×15mm
S X4 VIEW PRODUCT M5	T X8 VIEW PRODUCT Φ6 xΦ12mm	U X1 VIEW PRODUCT  4mm
V X1 6mm VIEW PRODUCT		

ASSEMBLY INSTRUCTION

DESCRIPTION
M7TEJ
MULTIPLAY WITH SWINGS, GLIDER, SLIDE & BASKETBALL NET

Part list for slide

H1 X1 Slide(Left Part)	H2 X1 Slide(Right Part)	H3 X1  Slide(Middle Part)
H4 X2 Slide Support Tube	H5 X2 Connecting Part	H6 X1  Connecting Plate
H7 X1 Slide Support (Right Part)	H7A X1 Slide Support (Left Part)	H8 X2 Slide Ladder Steps
H9 X2 Leg Tube And Slide Connector	H10 X16 VIEW PRODUCT  M6 X 9mm	H11 X4 VIEW PRODUCT  M6 X 14mm
H12 X8 VIEW PRODUCT  M6 X 30mm	H13 X4 VIEW PRODUCT  M6 X 25mm	H14 X6 VIEW PRODUCT M6
H15 X14 VIEW PRODUCT Φ6.5 X Φ13mm	H16 X8 VIEW PRODUCT Φ6.5 X Φ13mm	H17 X6 VIEW PRODUCT Φ6.5 X Φ10mm
H18 X16 VIEW PRODUCT Φ8.5 X Φ19mm		

ASSEMBLY INSTRUCTION

DESCRIPTION
M7TEJ
MULTIPLAY WITH SWINGS, GLIDER, SLIDE & BASKETBALL NET

Step 1

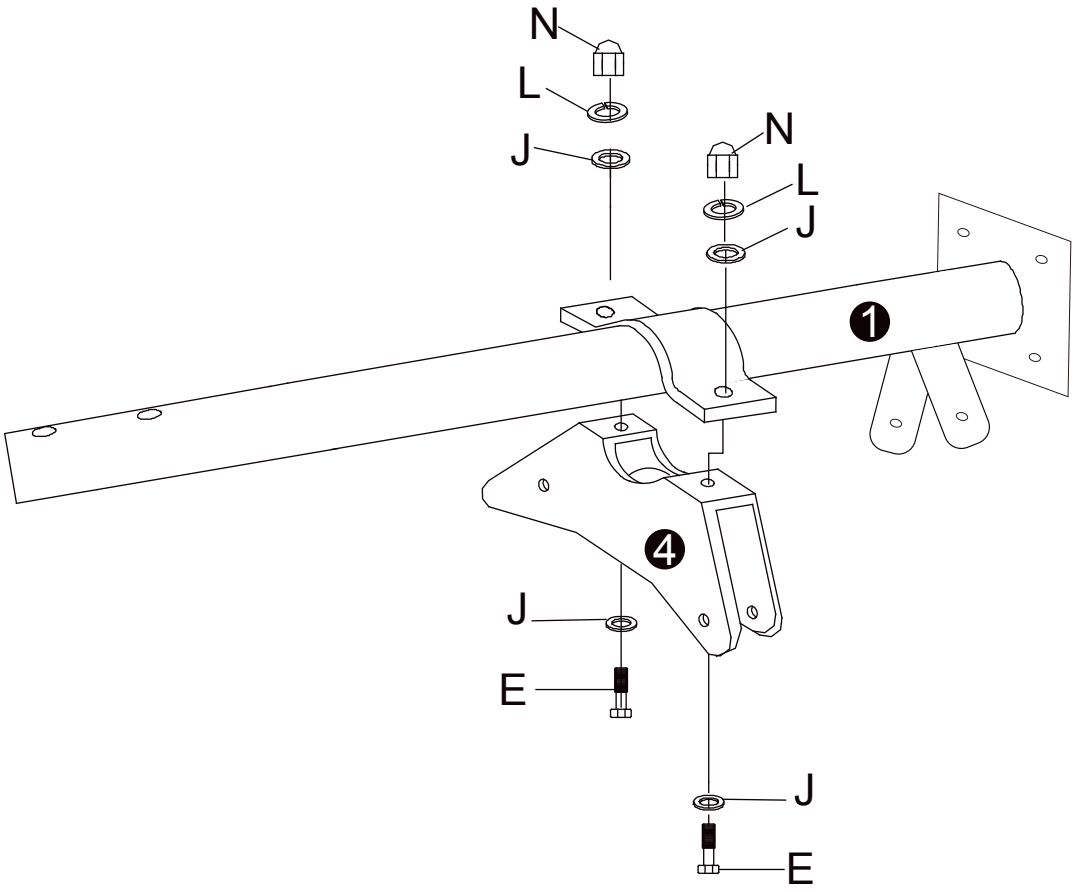

E	J	L	N
x 2pcs	x 4pcs	x 2pcs	x 2pcs

SPORTSPOWER™
20/F, Parkview Centre, 7 Lau Li Street, Causeway Bay, Hong Kong.
After Service Centre (+44) 0330 0904 420, Email support@sportspowerfit4kids.com or visit www.sportspowerfit4kids.com

ASSEMBLY INSTRUCTION

DESCRIPTION
M7TEJ
MULTIPLAY WITH SWINGS, GLIDER, SLIDE & BASKETBALL NET

Step 2

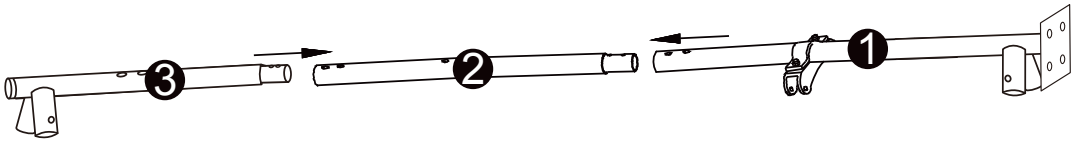

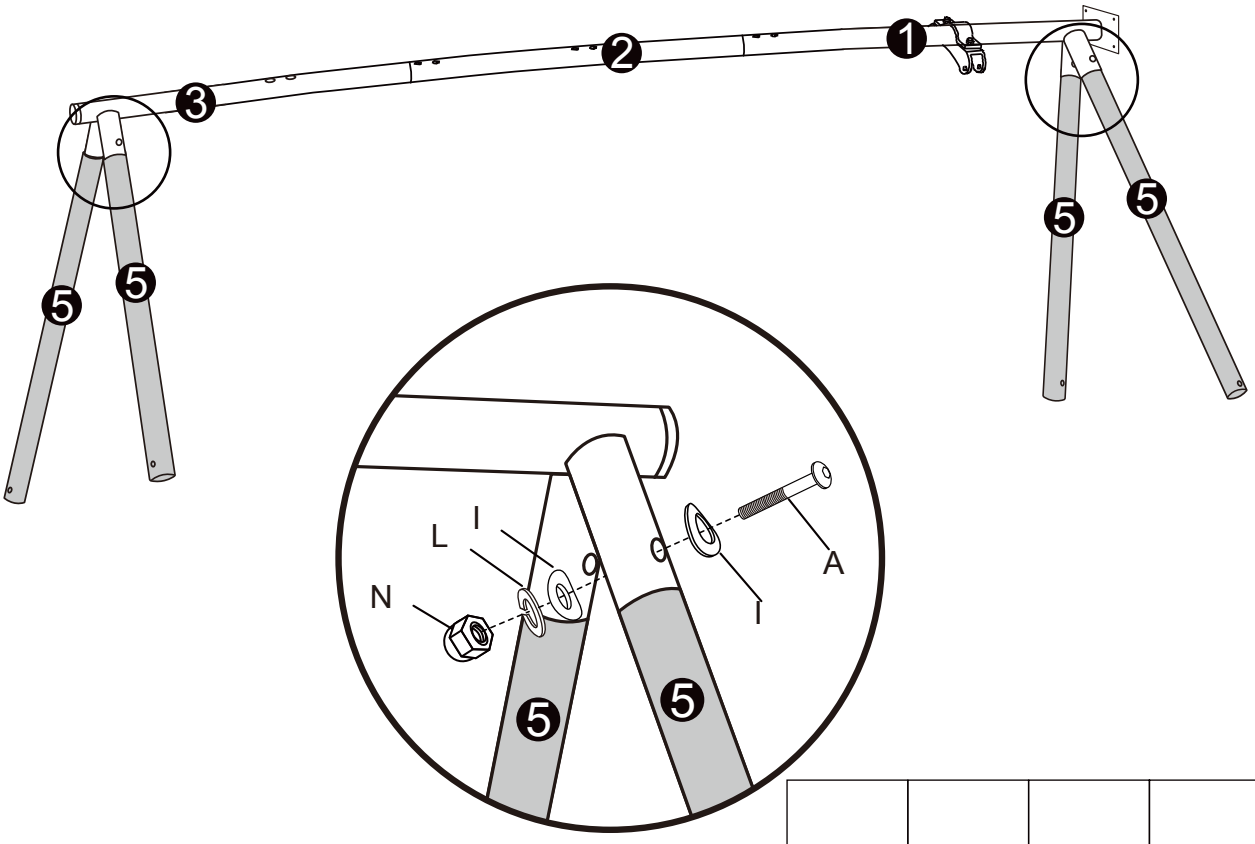

A	I	L	N
x 4pcs	x 8pcs	x 4pcs	x 4pcs

SPORTSPOWER™
20/F, Parkview Centre, 7 Lau Li Street, Causeway Bay, Hong Kong.
After Service Centre (+44) 0330 0904 420, Email support@sportspowerfit4kids.com or visit www.sportspowerfit4kids.com

ASSEMBLY INSTRUCTION

DESCRIPTION
M7TEJ
MULTIPLAY WITH SWINGS, GLIDER, SLIDE & BASKETBALL NET

Step 3

TIP: ENSURE TO ATTACH THE SWING SEAT TO THE U BOLT FIRST.

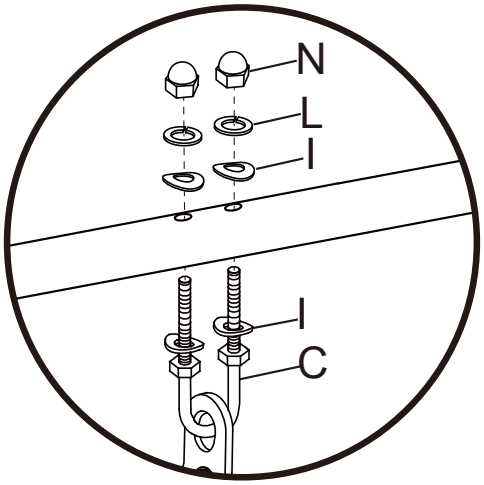

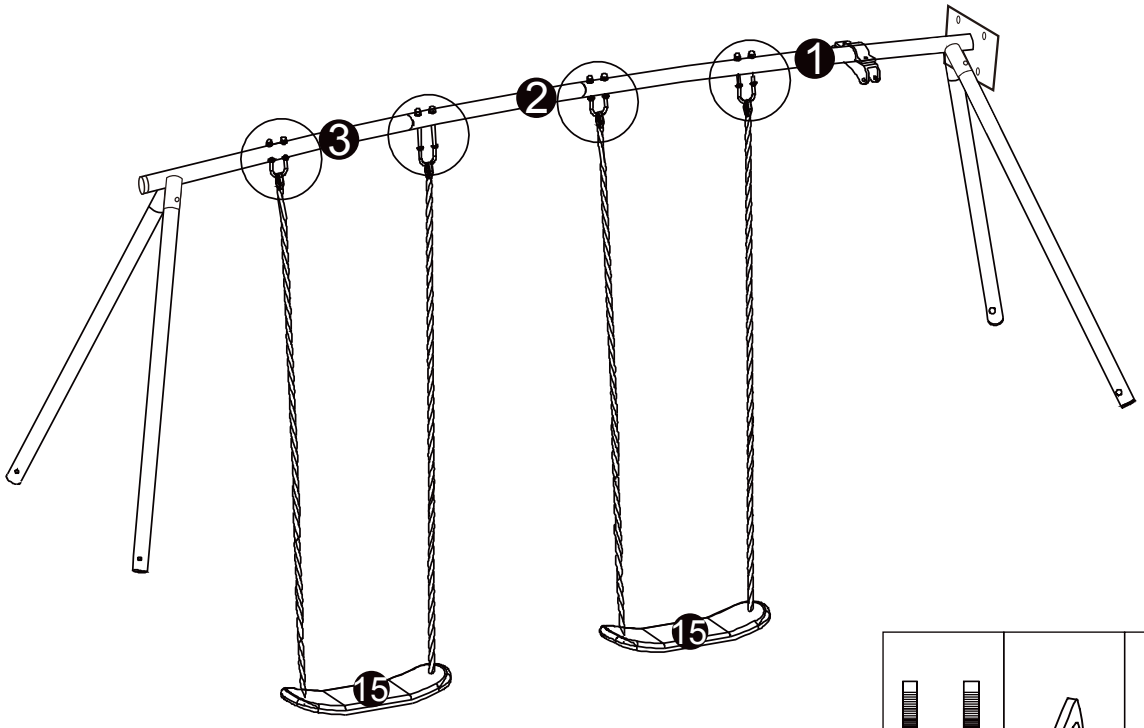

C	I	L	N
x 4pcs	x 16pcs	x 8pcs	x 8pcs

SPORTSPOWER™
20/F, Parkview Centre, 7 Lau Li Street, Causeway Bay, Hong Kong.
After Service Centre (+44) 0330 0904 420, Email support@sportspowerfit4kids.com or visit www.sportspowerfit4kids.com

ASSEMBLY INSTRUCTION

DESCRIPTION
M7TEJ
MULTIPLAY WITH SWINGS, GLIDER, SLIDE & BASKETBALL NET

Step 4

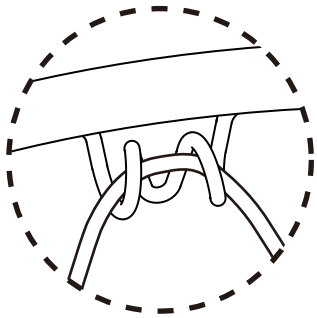

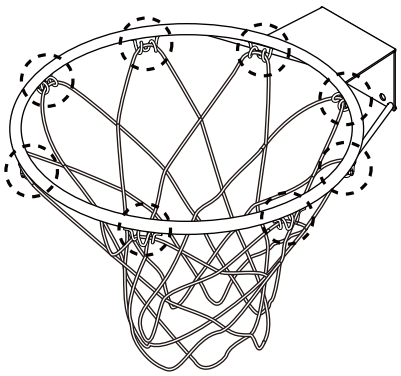

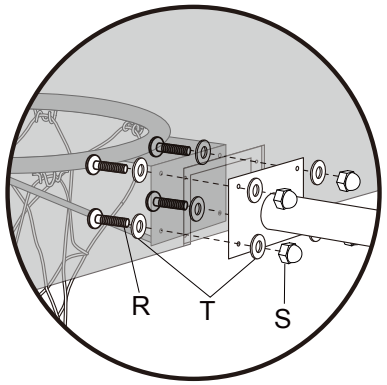

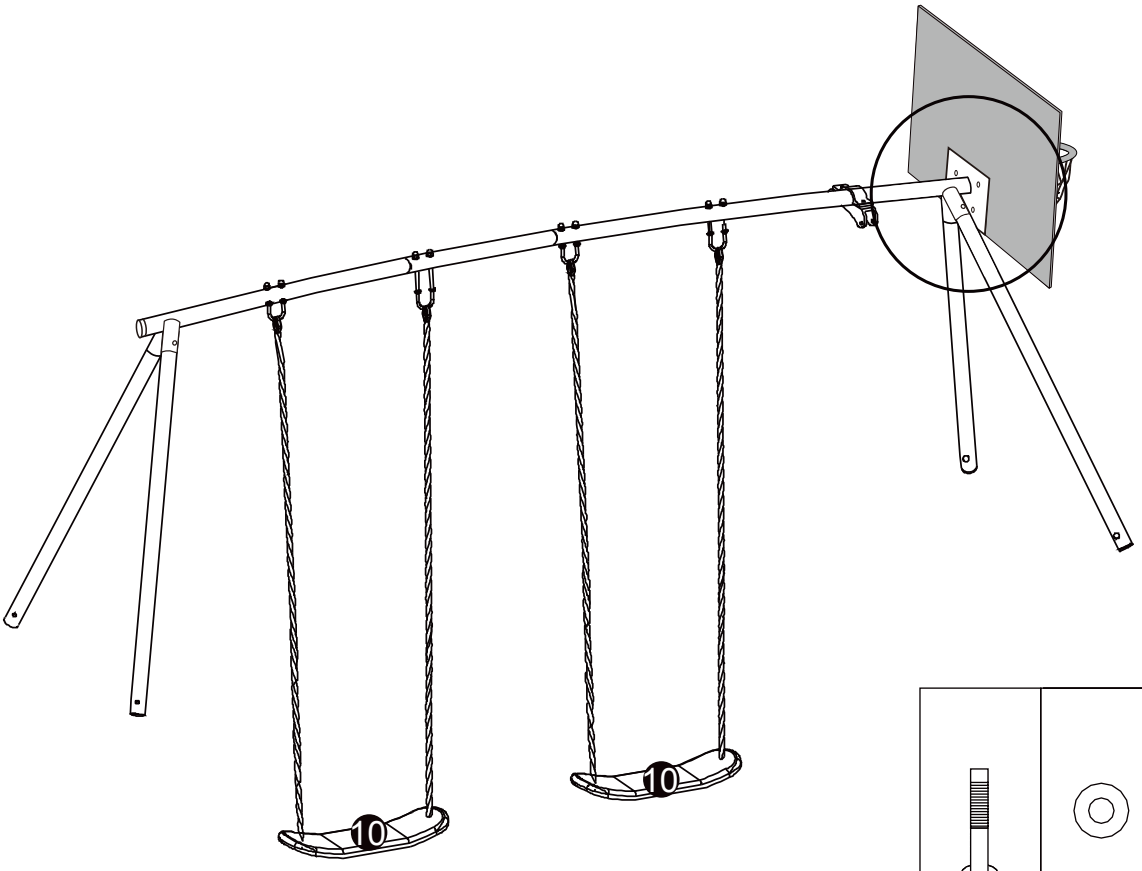

R	T	S
x 4pcs	x 8pcs	x 4pcs

SPORTSPOWER™
20/F, Parkview Centre, 7 Lau Li Street, Causeway Bay, Hong Kong.
After Service Centre (+44) 0330 0904 420, Email support@sportspowerfit4kids.com or visit www.sportspowerfit4kids.com

ASSEMBLY INSTRUCTION

DESCRIPTION
M7TEJ
MULTIPLAY WITH SWINGS, GLIDER, SLIDE & BASKETBALL NET

Step 5

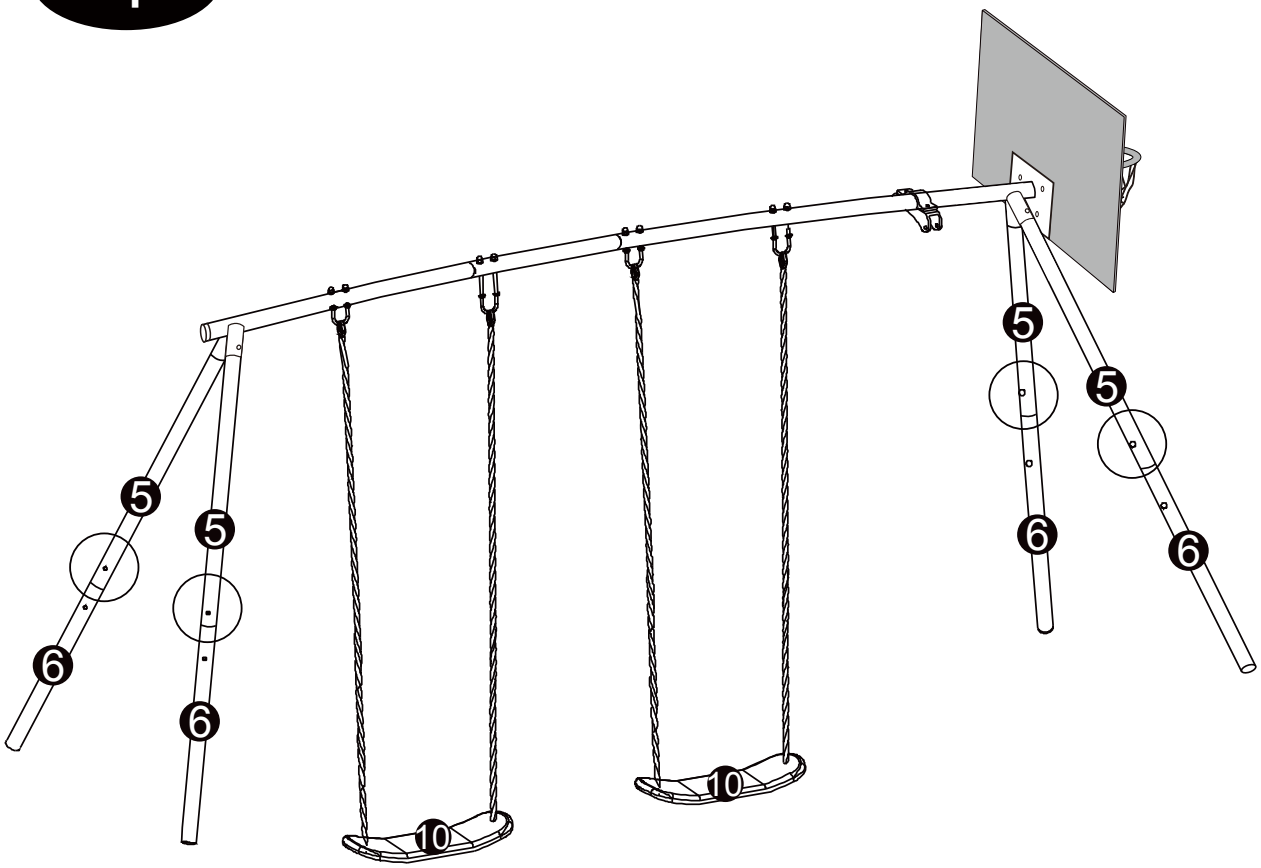

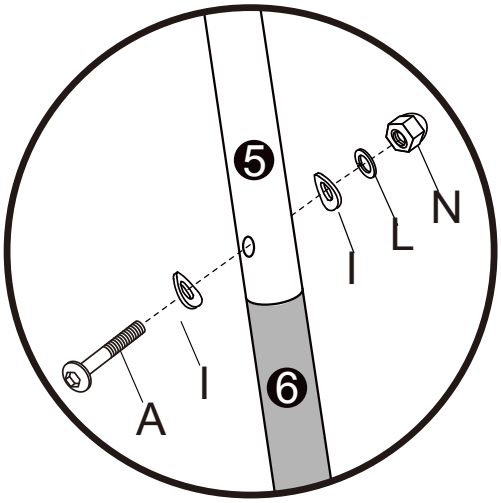

A	I	L	N
x 4pcs	x 8pcs	x 4pcs	x 4pcs

SPORTSPOWER™
20/F, Parkview Centre, 7 Lau Li Street, Causeway Bay, Hong Kong.
After Service Centre (+44) 0330 0904 420, Email support@sportspowerfit4kids.com or visit www.sportspowerfit4kids.com

ASSEMBLY INSTRUCTION

DESCRIPTION
M7TEJ
MULTIPLAY WITH SWINGS, GLIDER, SLIDE & BASKETBALL NET

Step 6

TIPS: #1 PLEASE ATTACH THE PLASTIC CAP(17) TO THE CROSS BAR(7&8) FIRST.

#2 THE CROSS BAR (7&8) NEEDS TO BE ATTACHED TO THE OUTER SIDE OF THE SWING FRAME

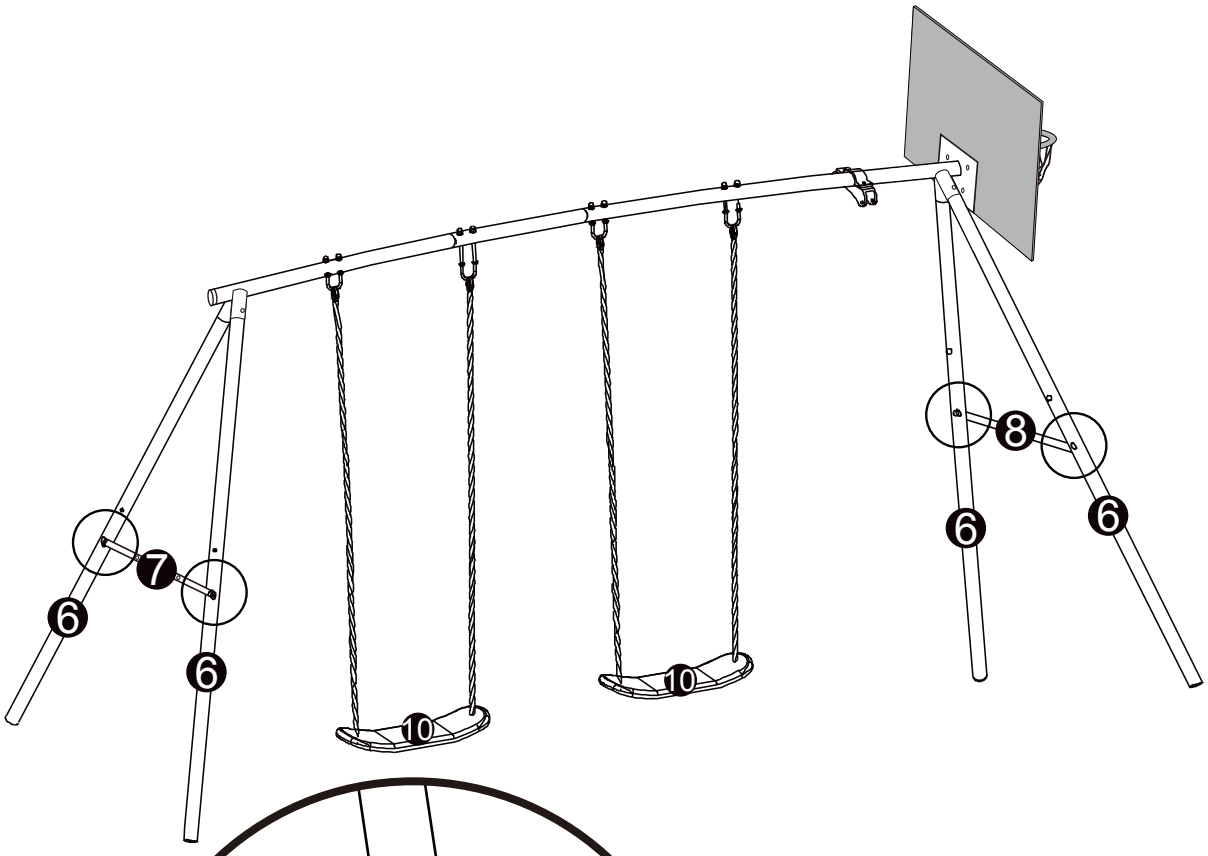

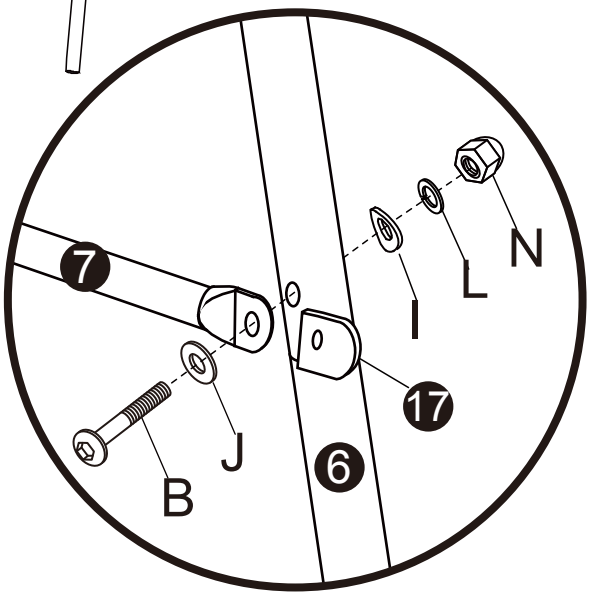

B	J	I	L	N
x 4pcs	x 4pcs	x 4pcs	x 4pcs	x 4pcs

SPORTSPOWER™
20/F, Parkview Centre, 7 Lau Li Street, Causeway Bay, Hong Kong.
After Service Centre (+44) 0330 0904 420, Email support@sportspowerfit4kids.com or visit www.sportspowerfit4kids.com

ASSEMBLY INSTRUCTION

DESCRIPTION
M7TEJ
MULTIPLAY WITH SWINGS, GLIDER, SLIDE & BASKETBALL NET

Step 7

NOTE : ENSURE TO ATTACH THE PLASTIC CONNECTOR(10) TO THE GLIDER TOP TUBE(9), THEN INSERT SHORT PLASTIC TUBE(19) .

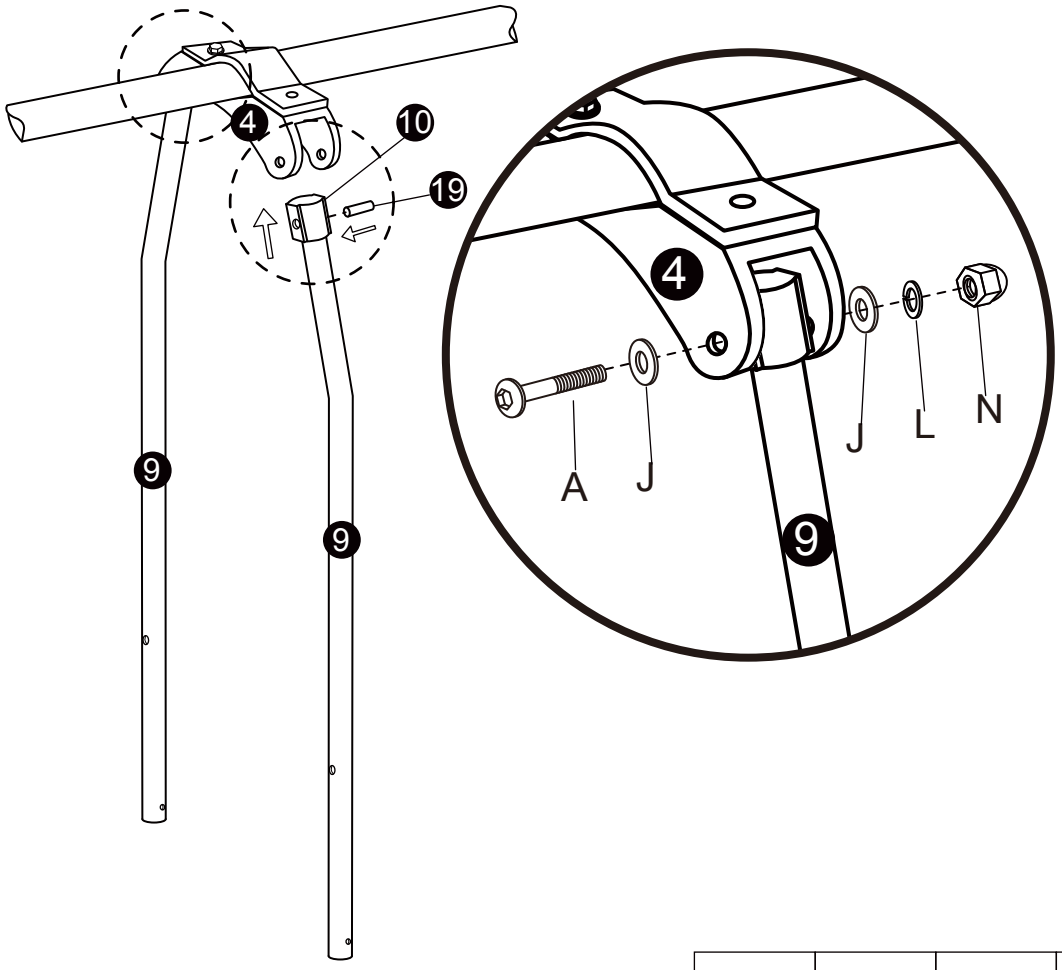

A	J	L	N
x 2pcs	x 4pcs	x 2pcs	x 2pcs

SPORTSPOWER™
20/F, Parkview Centre, 7 Lau Li Street, Causeway Bay, Hong Kong.
After Service Centre (+44) 0330 0904 420, Email support@sportspowerfit4kids.com or visit www.sportspowerfit4kids.com

ASSEMBLY INSTRUCTION

DESCRIPTION
M7TEJ
MULTIPLAY WITH SWINGS, GLIDER, SLIDE & BASKETBALL NET

Step 8

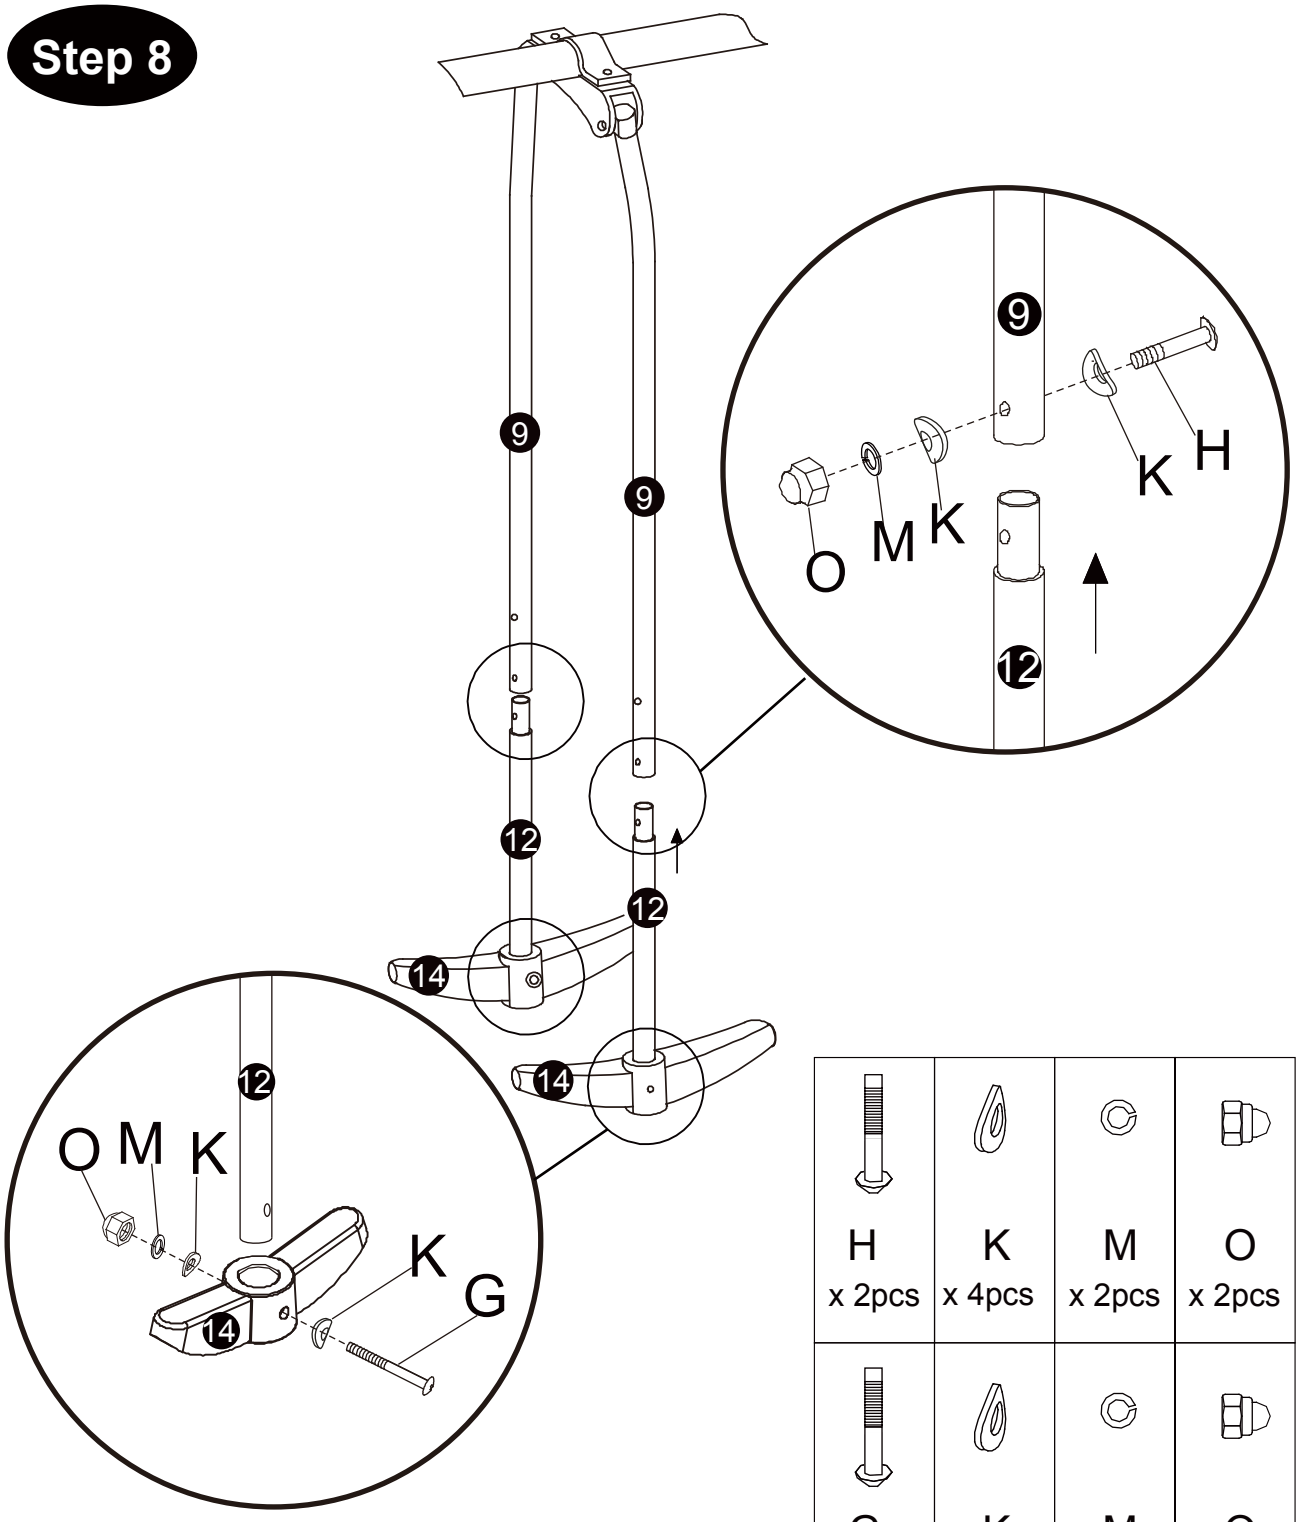

H x 2pcs	K x 4pcs	M x 2pcs	O x 2pcs
G x 2pcs	K x 4pcs	M x 2pcs	O x 2pcs

SPORTSPOWER™

20/F, Parkview Centre, 7 Lau Li Street, Causeway Bay, Hong Kong.
After Service Centre (+44) 0330 0904 420, Email support@sportspowerfit4kids.com or visit www.sportspowerfit4kids.com

ASSEMBLY INSTRUCTION

DESCRIPTION
M7TEJ
MULTIPLAY WITH SWINGS, GLIDER, SLIDE & BASKETBALL NET

Step 9

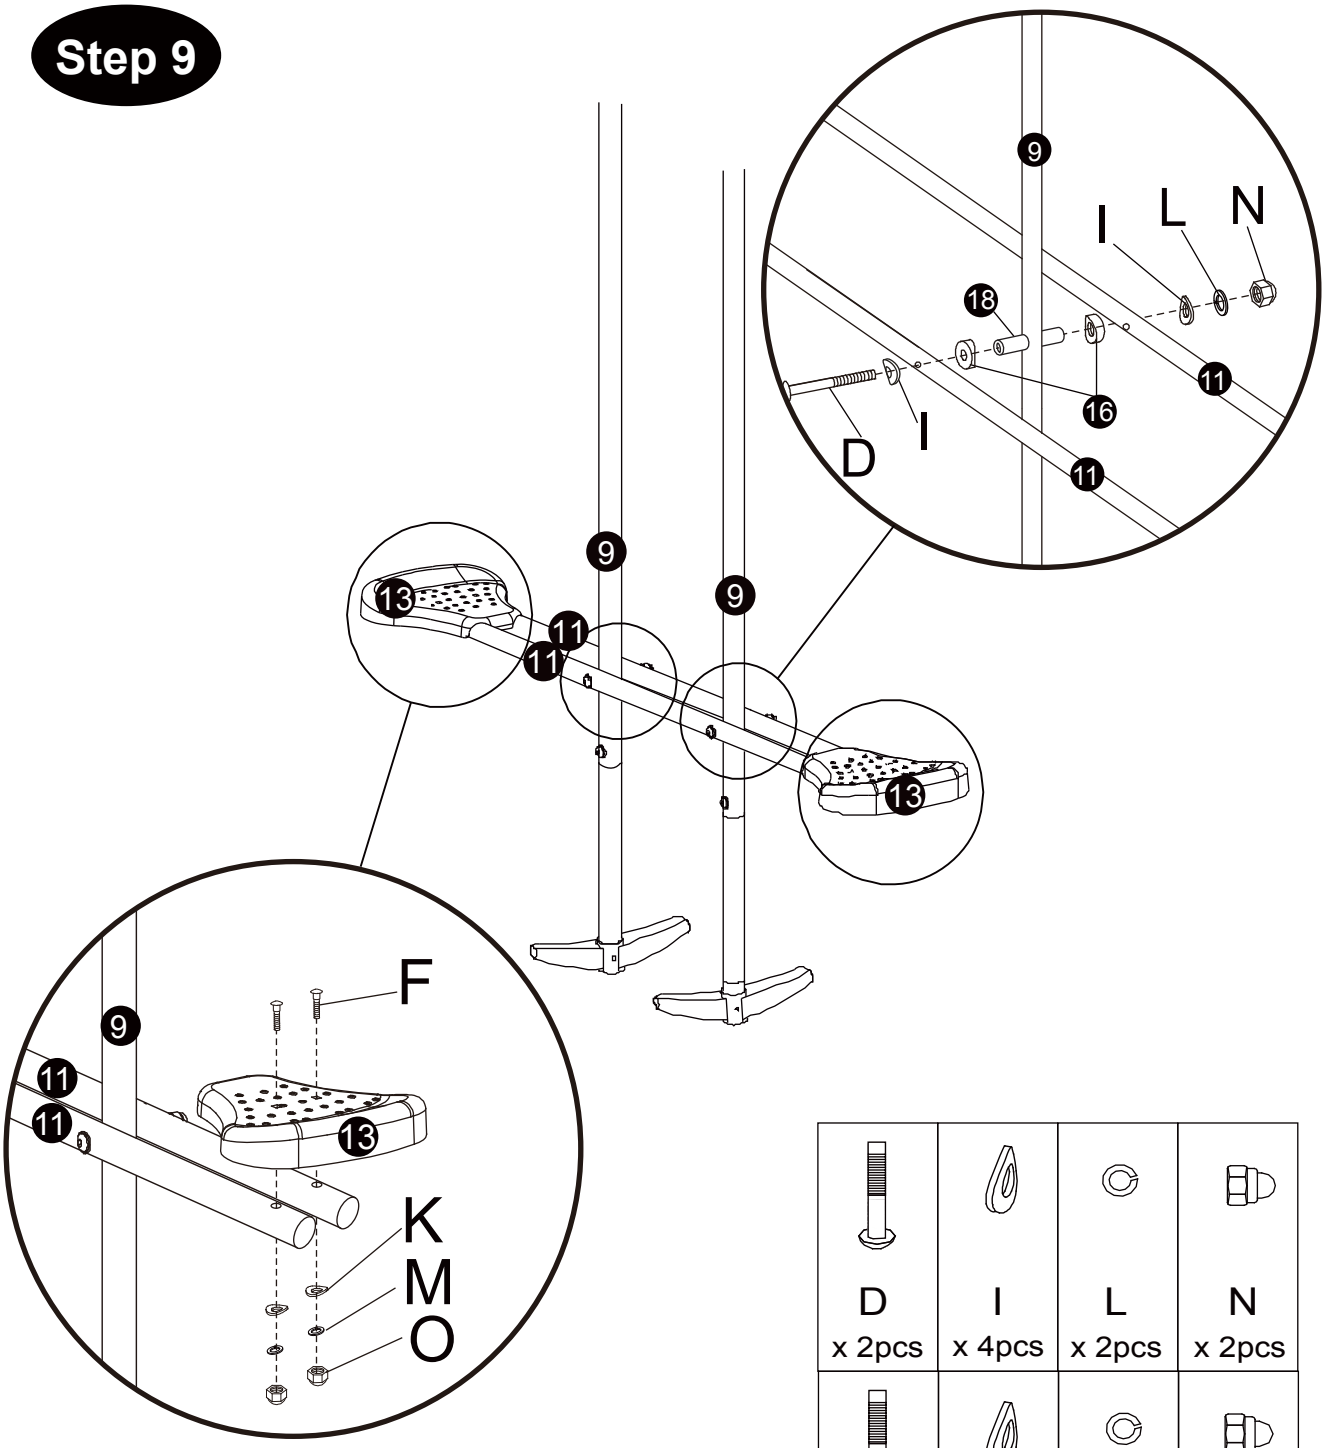

D x 2pcs	I x 4pcs	L x 2pcs	N x 2pcs
F x 4pcs	K x 4pcs	M x 4pcs	O x 4pcs

ASSEMBLY INSTRUCTION

DESCRIPTION
M7TEJ
MULTIPLAY WITH SWINGS, GLIDER, SLIDE & BASKETBALL NET

Step 10

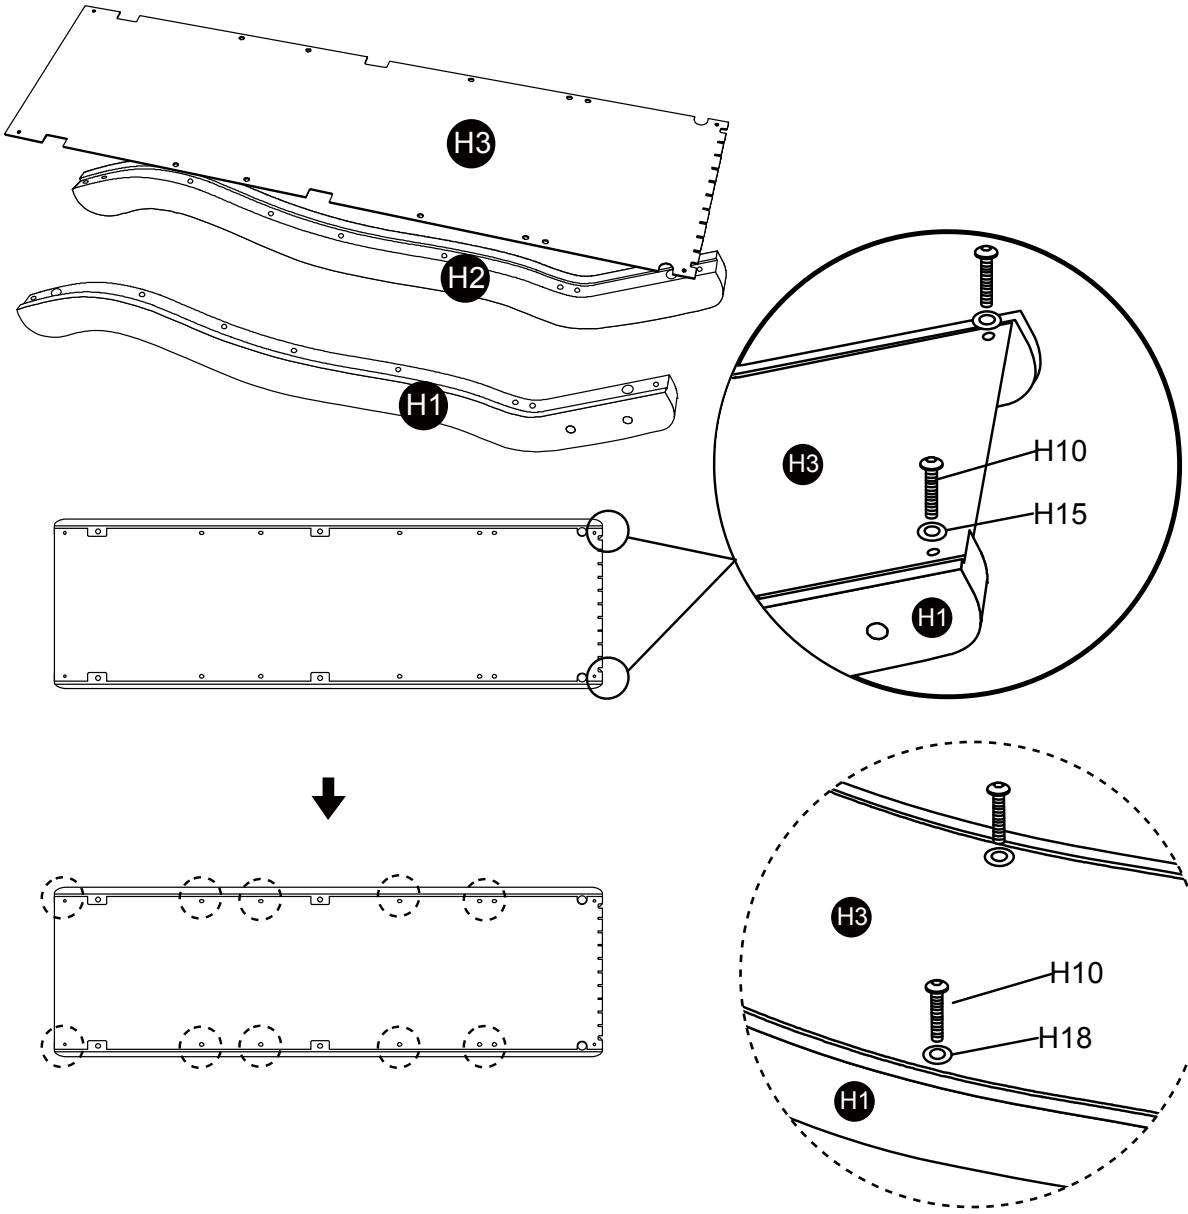

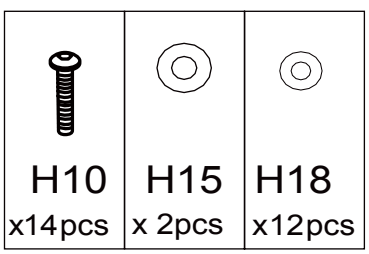

SPORTSPOWER™
20/F, Parkview Centre, 7 Lau Li Street, Causeway Bay, Hong Kong.
After Service Centre (+44) 0330 0904 420, Email support@sportspowerfit4kids.com or visit www.sportspowerfit4kids.com

Step 11

Two people needed for this step.

1. Slide H6 into the end of plastic sheet with teeth.
   Gently push the plastic sheet upward with one hand, line up the teeth with the corresponding indents on the bottom of H6 and push it gently to slide it into place.
2. Turn slide over. With one person holding H6 firmly in place, another person should insert H4 into the slots at the bottom of H6. Tip: it is easier to install H4 by tilting H6 upwards.

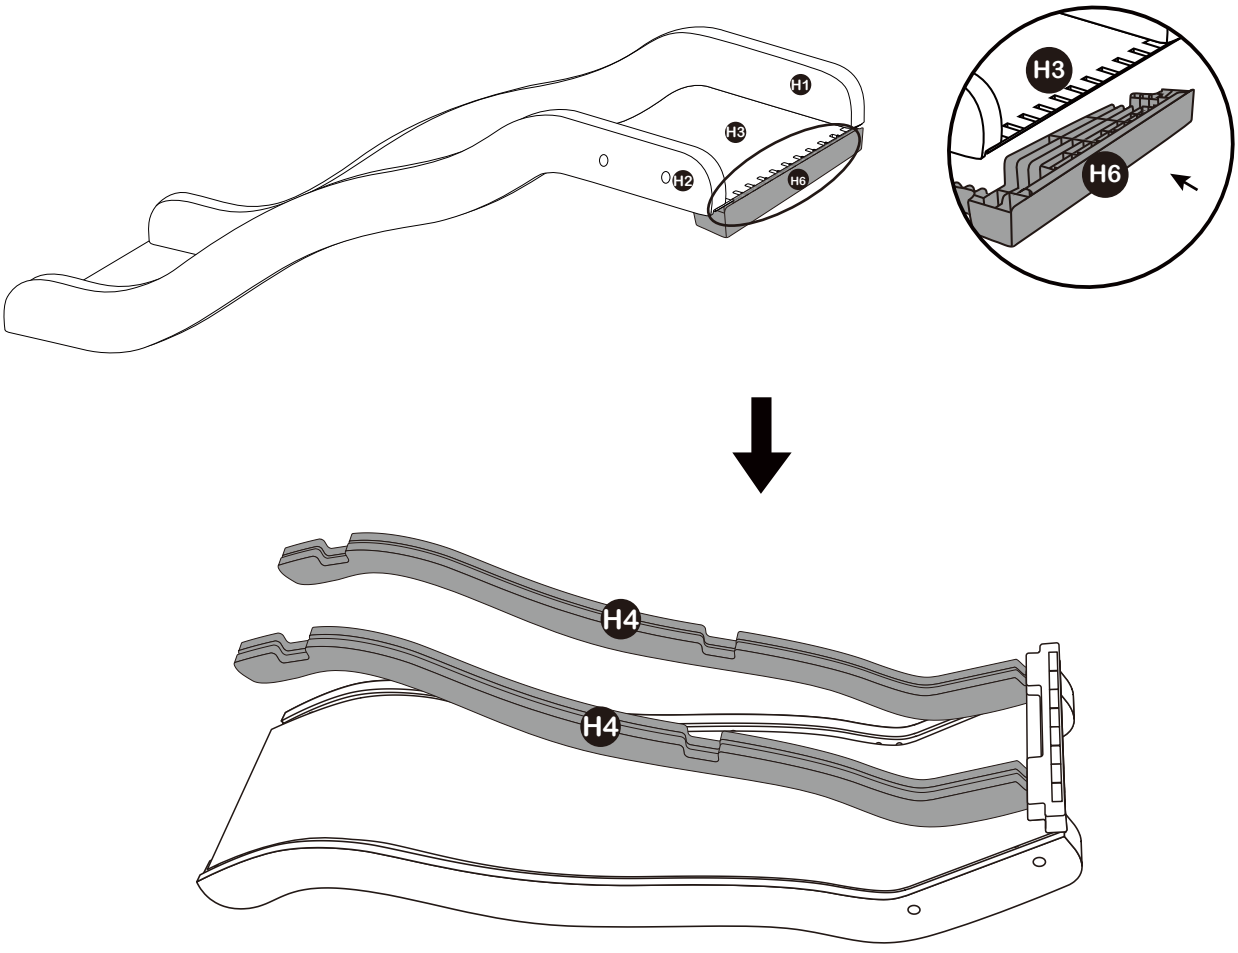

ASSEMBLY INSTRUCTION

DESCRIPTION
M7TEJ
MULTIPLAY WITH SWINGS, GLIDER, SLIDE & BASKETBALL NET

Step 12

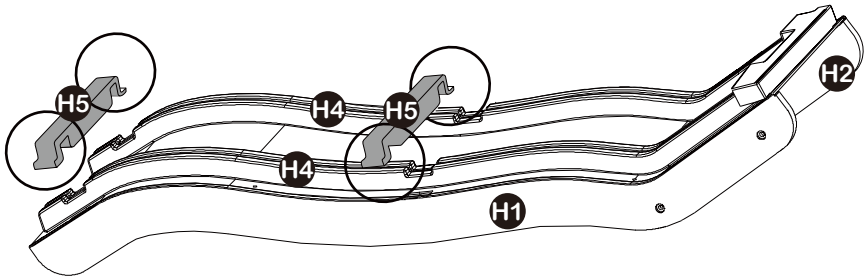

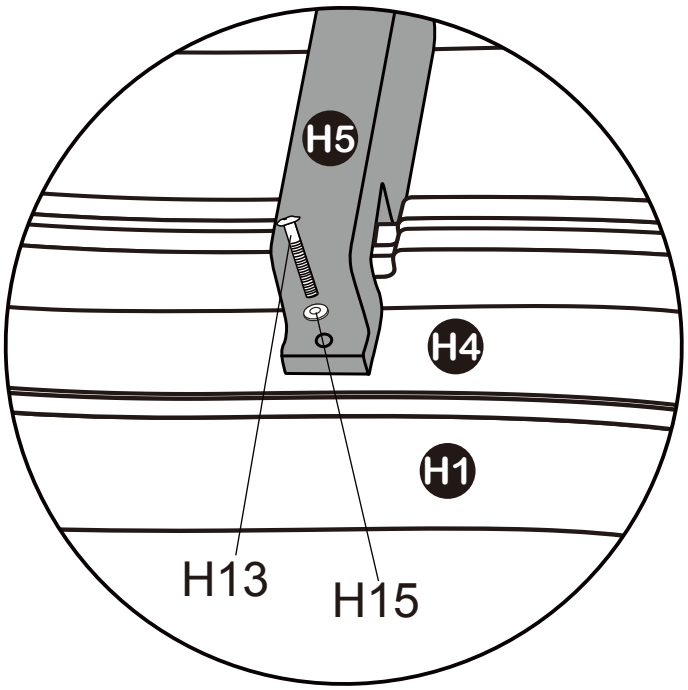

H13	H15
x4pcs	x 4pcs

SPORTSPOWER™
20/F, Parkview Centre, 7 Lau Li Street, Causeway Bay, Hong Kong.
After Service Centre (+44) 0330 0904 420, Email support@sportspowerfit4kids.com or visit www.sportspowerfit4kids.com

ASSEMBLY INSTRUCTION

DESCRIPTION
M7TEJ
MULTIPLAY WITH SWINGS, GLIDER, SLIDE & BASKETBALL NET

Step 13

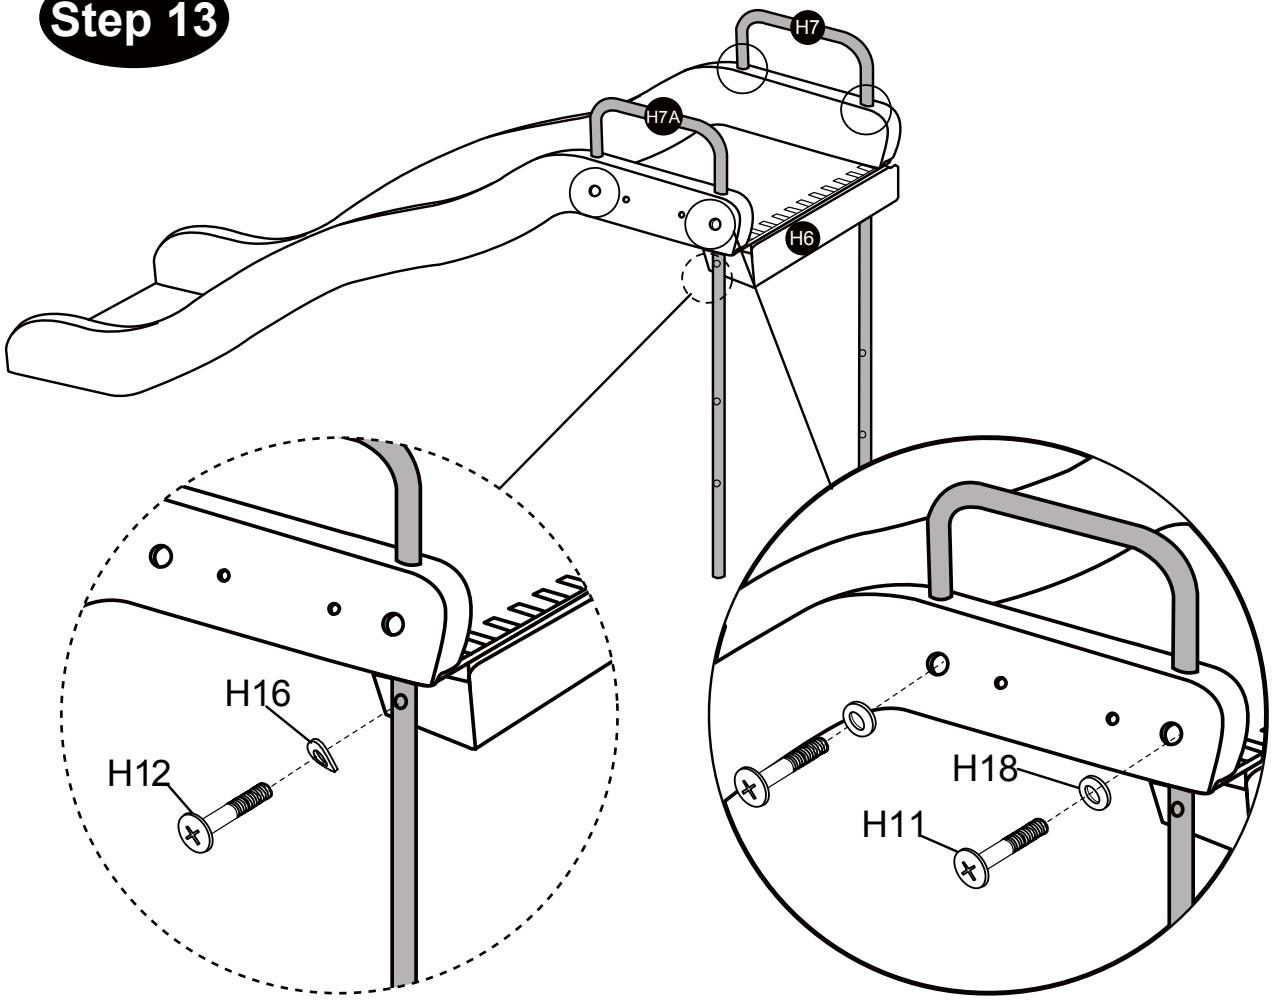

DIAGRAM A

DIAGRAM B

H11	H12	H16	H18
X4pcs	X2pcs	X2pcs	X4pcs

SPORTSPOWER™
20/F, Parkview Centre, 7 Lau Li Street, Causeway Bay, Hong Kong.
After Service Centre (+44) 0330 0904 420, Email support@sportspowerfit4kids.com or visit www.sportspowerfit4kids.com

ASSEMBLY INSTRUCTION

DESCRIPTION
M7TEJ
MULTIPLAY WITH SWINGS, GLIDER, SLIDE & BASKETBALL NET

Step 14

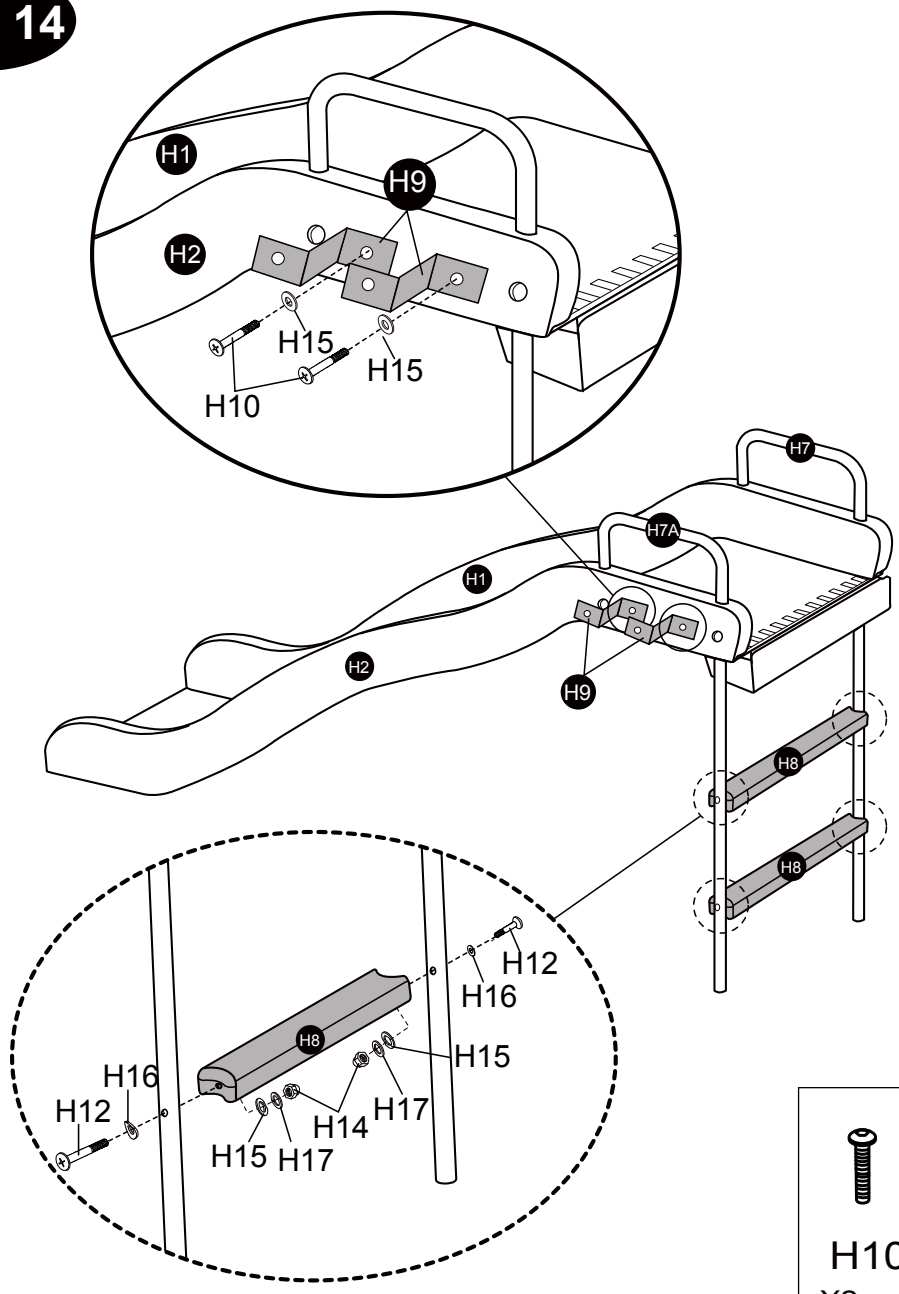

H10 X2pcs	H12 X4pcs	H14 X4pcs
H15 X6pcs	H16 X4pcs	H17 X4pcs

ASSEMBLY INSTRUCTION

DESCRIPTION
M7TEJ
MULTIPLAY WITH SWINGS, GLIDER, SLIDE & BASKETBALL NET

Step 15

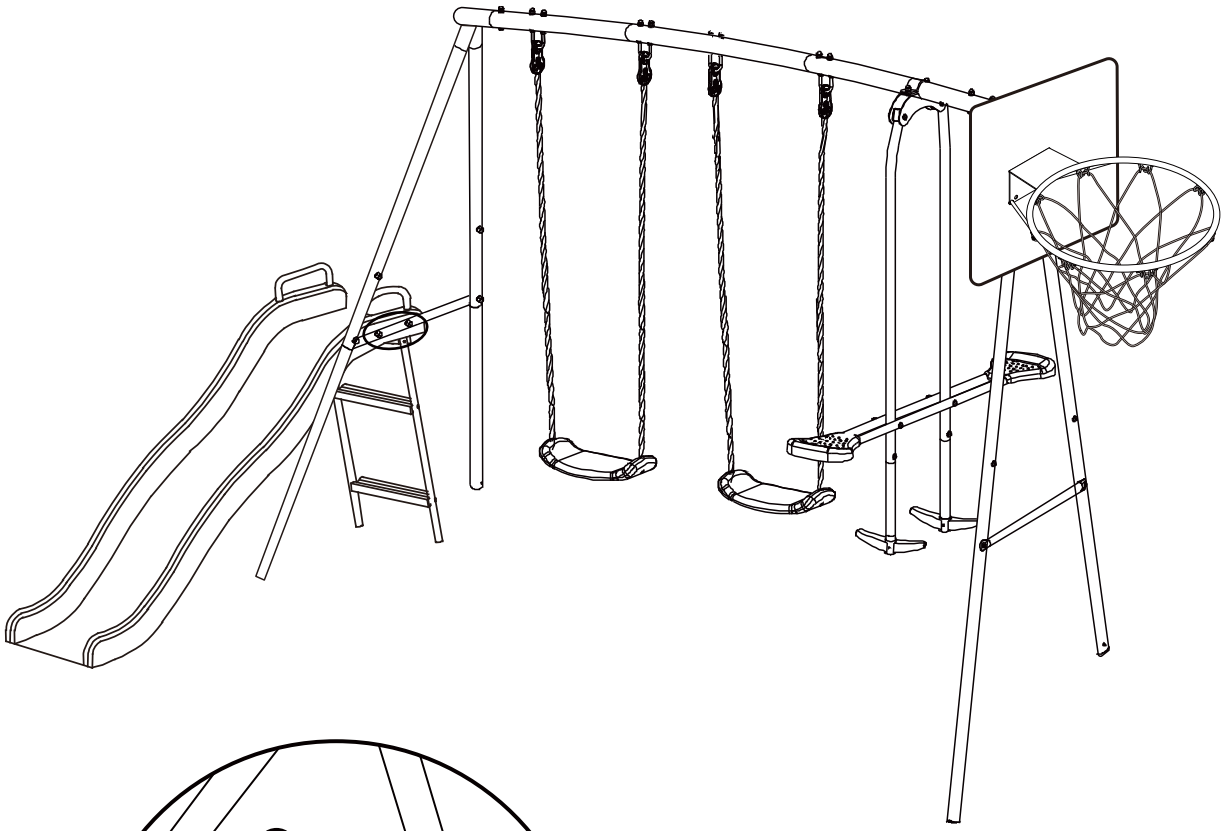

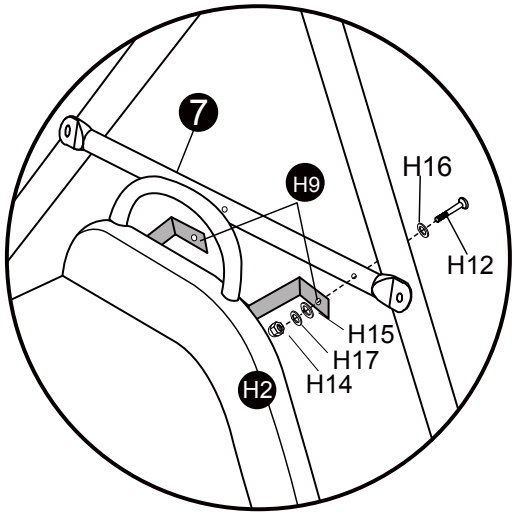

	H12 X2pcs	H14 X2pcs
H15 X2pcs	H16 X2pcs	H17 X2pcs

SPORTSPOWER™
20/F, Parkview Centre, 7 Lau Li Street, Causeway Bay, Hong Kong.
After Service Centre (+44) 0330 0904 420, Email support@sportspowerfit4kids.com or visit www.sportspowerfit4kids.com

ASSEMBLY INSTRUCTION

DESCRIPTION
M7TEJ
MULTIPLAY WITH SWINGS, GLIDER, SLIDE & BASKETBALL NET

Step 16

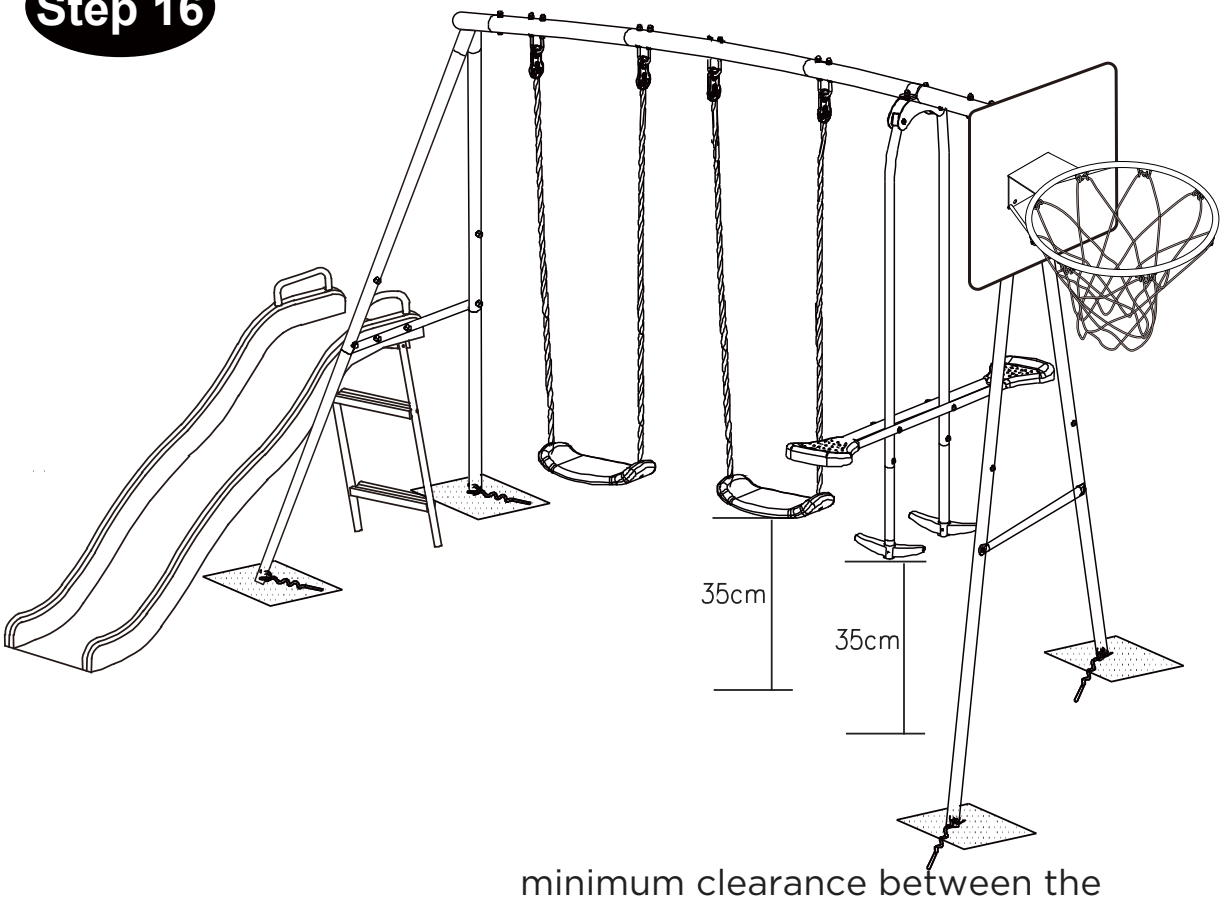

minimum clearance between the footrest and the ground.

IMPORTANT: The product must be anchored into the ground. For optimum safety and performance, we recommend concreting in the corners as shown in the diagram.

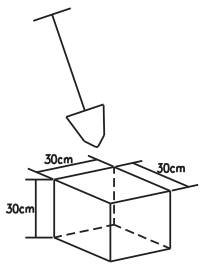

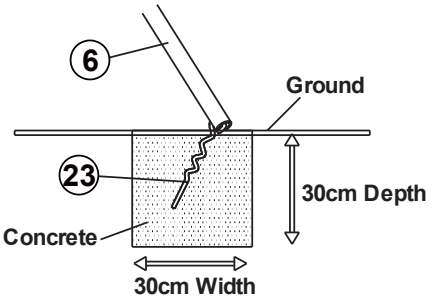

SP-19-SW086-SD-18001

ASSEMBLY INSTRUCTION

DESCRIPTION
M7TEJ
MULTIPLAY WITH SWINGS, GLIDER, SLIDE & BASKETBALL NET

SEAT ADJUSTABLE GUIDE

THE LENGTH OF THE ROPE IS ADJUSTABLE FOR THE HEIGHT OF THE CHILD THROUGH THE SEAT CONNECTOR.

TO ADJUST, LOOSEN THE KNOT ON THE SEAT CONNECTOR, PULL ROPE THROUGH THE HOLES AND TIGHTEN AGAIN.

MAKE SURE THAT THE KNOTS ARE TIGHT AND THAT BOTH ROPES ARE ADJUSTED SO THAT THE SEAT IS HORIZONTAL.

IMPORTANT: Minimum clearance between the footrest/seat and the ground should be 35 cm.

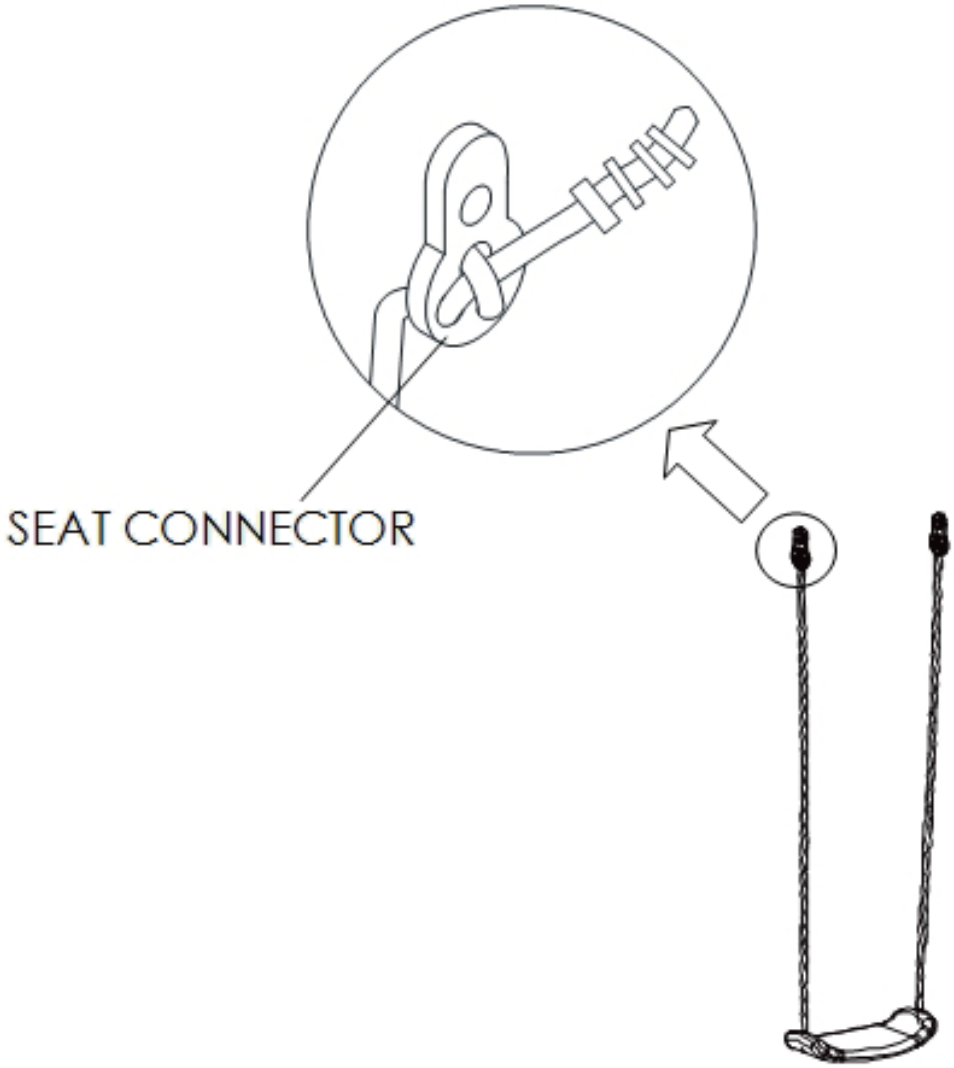

SP-19-SW086-SD-18001